

Transmitter Field Strength Meter

Instructions

1. Place Key in Board
2. Fully extend Antenna
3. Switch Transmitter On
4. With Antenna horizontal,
place against bottom of case
5. Do a Range Test as well

Meter Reading

Greater than half scale: Good
Less than half scale: Low

Antenna

