


3. Electrical Components Location

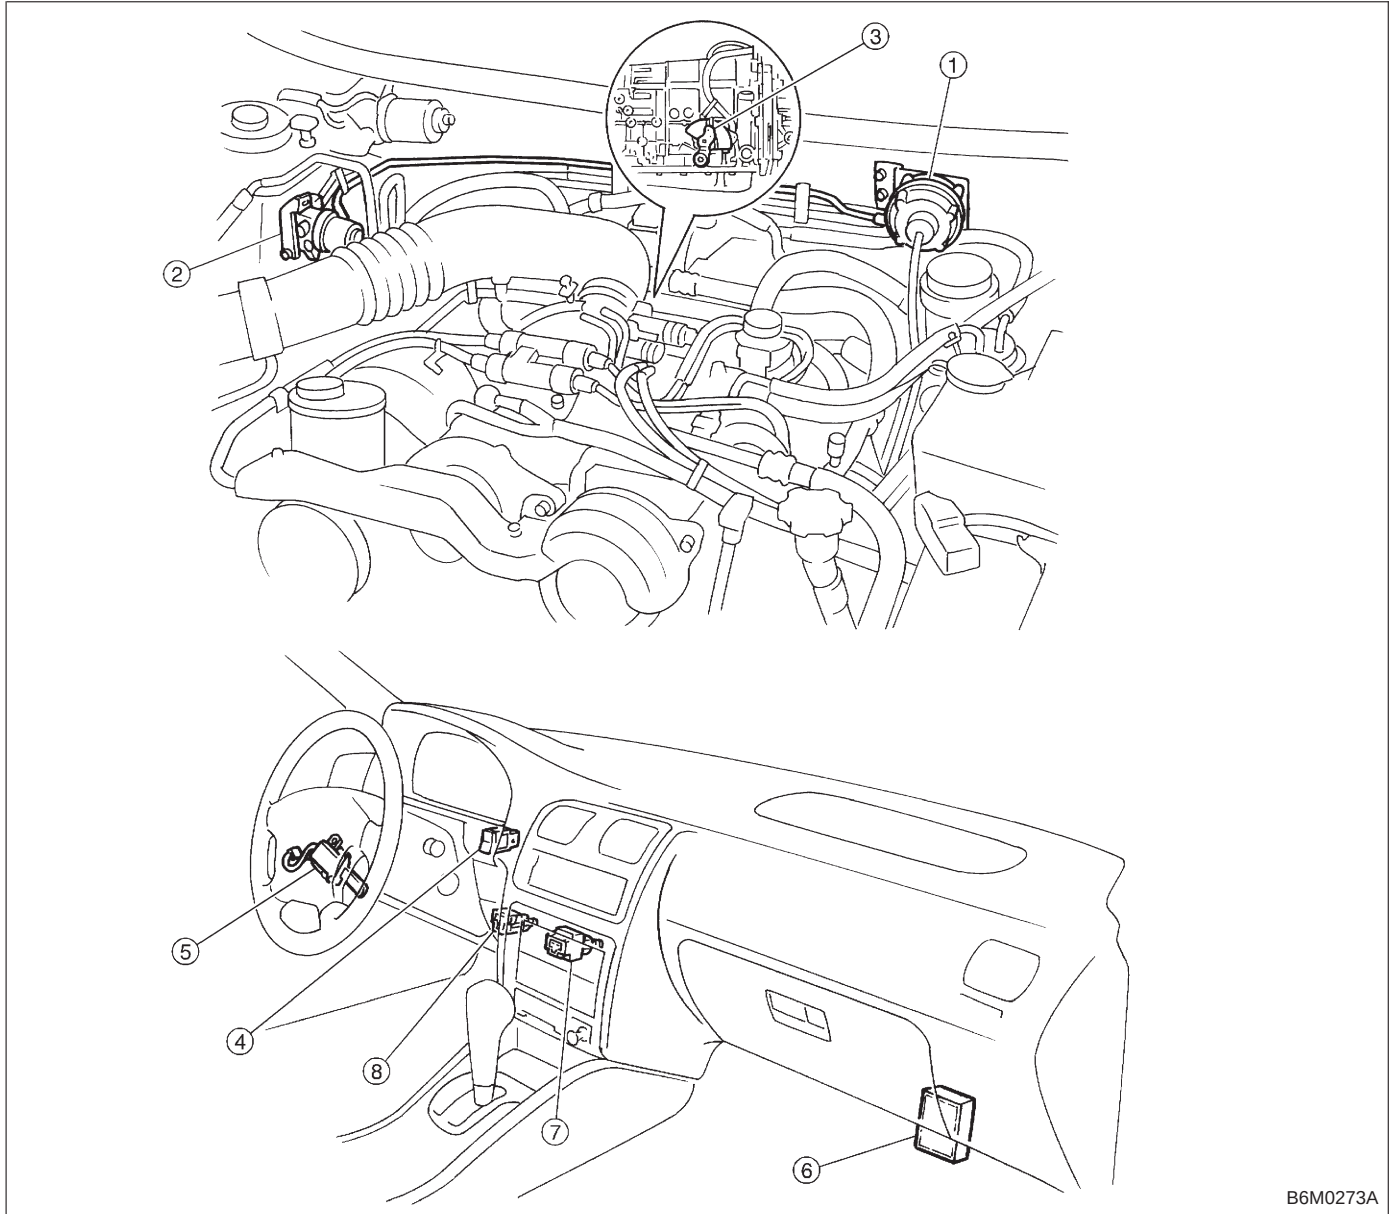

B6M0273A

① Actuator	⑤ Cruise control command switch
② Vacuum pump and valve	⑥ Cruise control module
③ Inhibitor switch (AT)	⑦ Stop and brake switch
④ Cruise control main switch	⑧ Clutch switch (MT)