4. Schematic

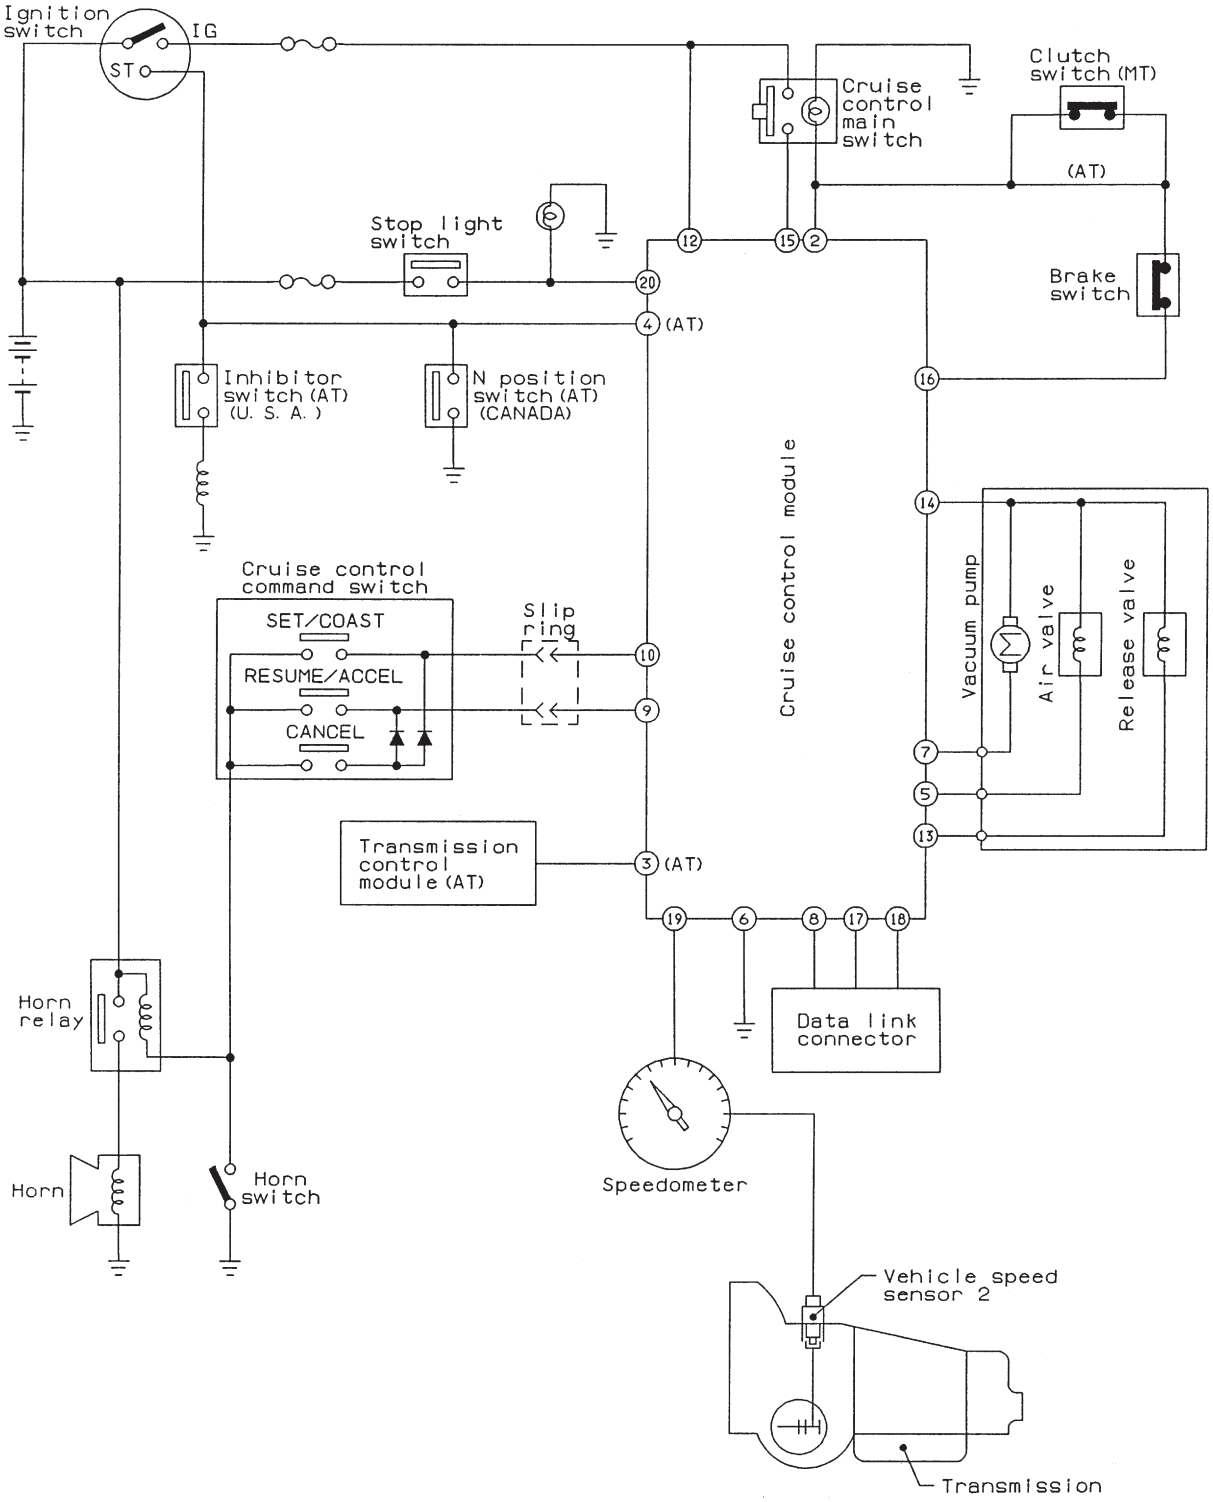
Ignition switch
IG
ST
Cruise control main switch
Clutch switch (MT)
(AT)
Stop light switch
Brake switch
(AT)
Inhibitor switch (AT) (U. S. A.)
N position switch (AT) (CANADA)
Cruise control module
Cruise control command switch
SET/COAST
RESUME/ACCEL
CANCEL
Slip ring
Vacuum pump
Air valve
Release valve
Transmission control module (AT)
(AT)
Data link connector
Horn relay
Horn
Horn switch
Speedometer
Vehicle speed sensor 2
Transmission
B6M0274