


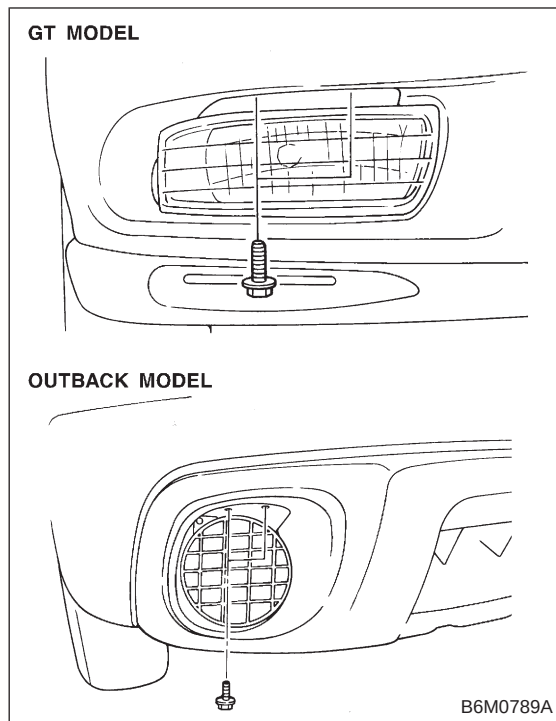

24. Front Fog Light

A: REMOVAL AND INSTALLATION

- 1) Disconnect ground cable from battery.
- 2) Remove the two bolts, then draw out the front fog light from front bumper.
- 3) Disconnect the connector.
- 4) Installation is in the reverse order of removal.