
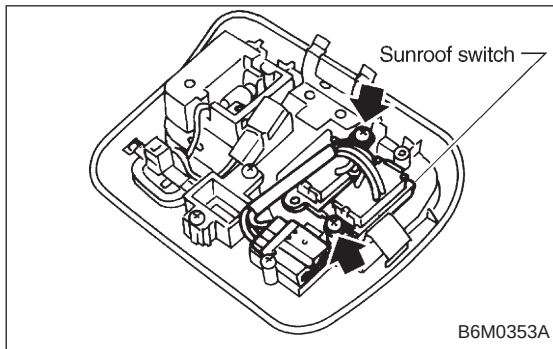


## 19. Sunroof

### A: REMOVAL AND INSTALLATION

#### 1. SUNROOF AND SUNROOF MOTOR

Refer to 5-1 [W16A0] as for removal and installation of sunroof system.

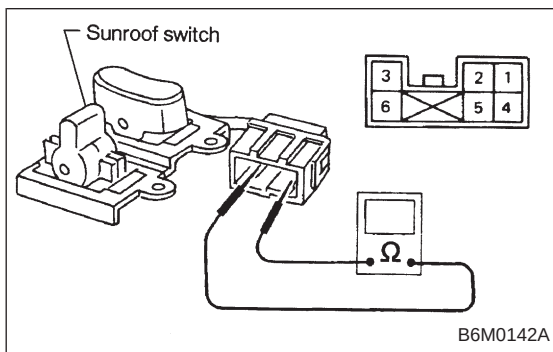

#### 2. SUNROOF SWITCH

##### NOTE:

The sunroof switch is installed in spot light body.


- 1) Pry spot light lens off using a screwdriver.
- 2) Remove screws which secure spot light body.
- 3) Remove spot light body while disconnecting connectors.
- 4) Remove screw which secures sunroof switch, and then remove sunroof switch.

### B: INSPECTION

#### 1. SUNROOF SWITCH

Set sunroof switch to each position and check continuity between terminals as indicated in table below:


| Terminal        | 4 | 3 | 6 | 5 | 2 |
|-----------------|---|---|---|---|---|
| Switch position |   |   |   |   |   |
| Open            | ○ | ○ |   |   |   |
| Close           | ○ |   | ○ |   |   |
| Tilt up         | ○ |   |   | ○ |   |
| Tilt down       | ○ |   |   |   | ○ |

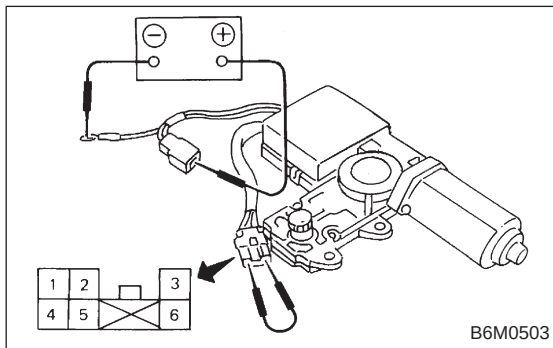

#### 2. SUNROOF MOTOR

- 1) Apply battery voltage between 1-pin connector and body ground wire.
- 2) Make sure that sunroof motor moves when connecting terminals as described below:


- Connect between terminals No. 3 and 4 (OPEN)
- Connect between terminals No. 6 and 4 (CLOSE)
- Connect between terminals No. 5 and 4 (TILT UP)
- Connect between terminals No. 2 and 4 (TILT DOWN)

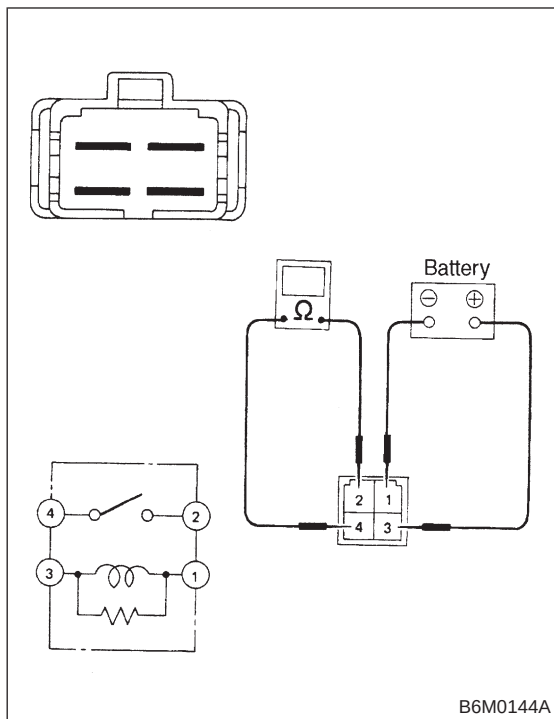

### 3. SUNROOF RELAY

Check continuity between terminals as indicated in table below, when battery voltage is applied between terminals No. 1 and No. 3.

|                             |                                   |                            |
|-----------------------------|-----------------------------------|----------------------------|
| When current flows.         | Between terminals No. 2 and No. 4 | Continuity exists.         |
| When current does not flow. | Between terminals No. 2 and No. 4 | Continuity does not exist. |
|                             | Between terminals No. 1 and No. 3 | Continuity exists.         |

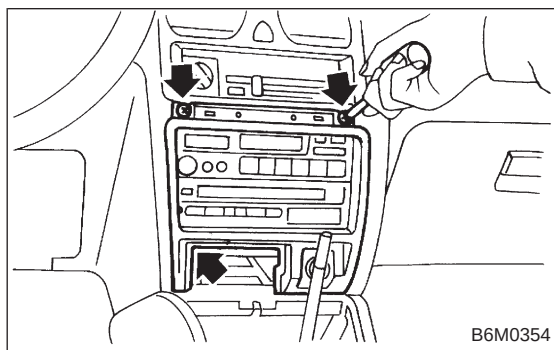


## 20. Radio, Speaker and Antenna

### A: REMOVAL AND INSTALLATION

#### 1. RADIO BODY

- 1) Remove hand brake cover.
- 2) Remove console cover.
- 3) Remove screws which secure center panel. Remove center panel.
- 4) Remove fitting screws, and slightly pull radio out of instrument panel.
- 5) Disconnect connectors and antenna feeder cord.

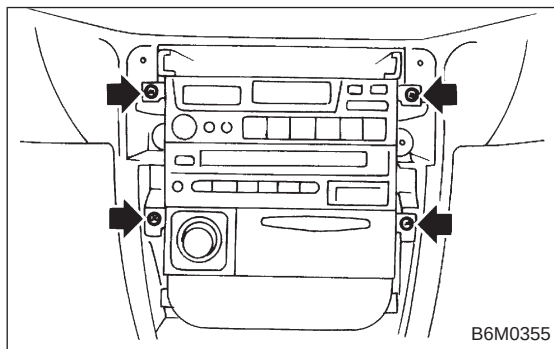

#### 2. FRONT SPEAKER

- 1) Remove gusset speaker from behind the rearview mirror while disconnecting connector.
- 2) Remove door trim panel. <Ref. to 5-2 [W2A2].>

