


6. ABS System (Except ABS 5.3i Type)

1. SENSOR AND CONTROL MODULE (EXCEPT ABS 5.3 TYPE)

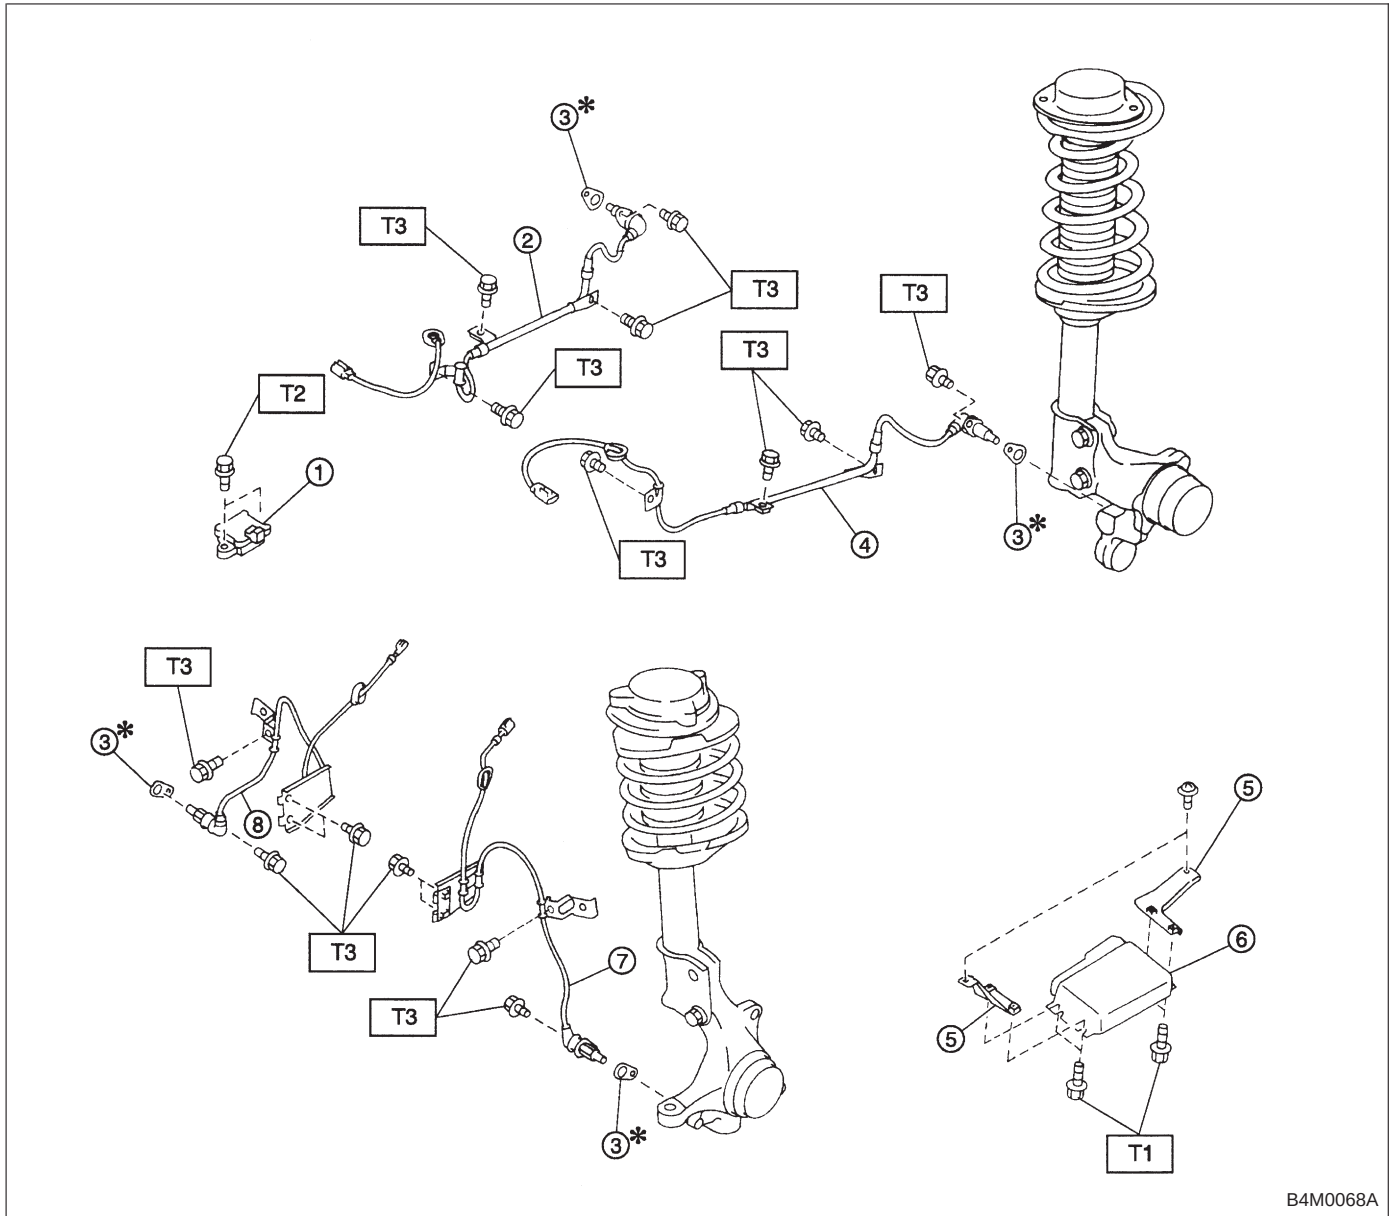

B4M0068A

① G sensor (AWD MT only)	⑥ ABS control module
② Rear ABS sensor RH	⑦ Front ABS sensor LH
③ ABS spacer	⑧ Front ABS sensor RH
④ Rear ABS sensor LH	
⑤ Bracket	


Tightening torque: N·m (kg-m, ft-lb)

T1: 5.9±1.5 (0.60±0.15, 4.3±1.1)

T2: 7.4±2.0 (0.75±0.2, 5.4±1.4)

T3: 32±10 (3.3±1.0, 24±7)

2. HYDRAULIC CONTROL UNIT (EXCEPT ABS 5.3 TYPE)

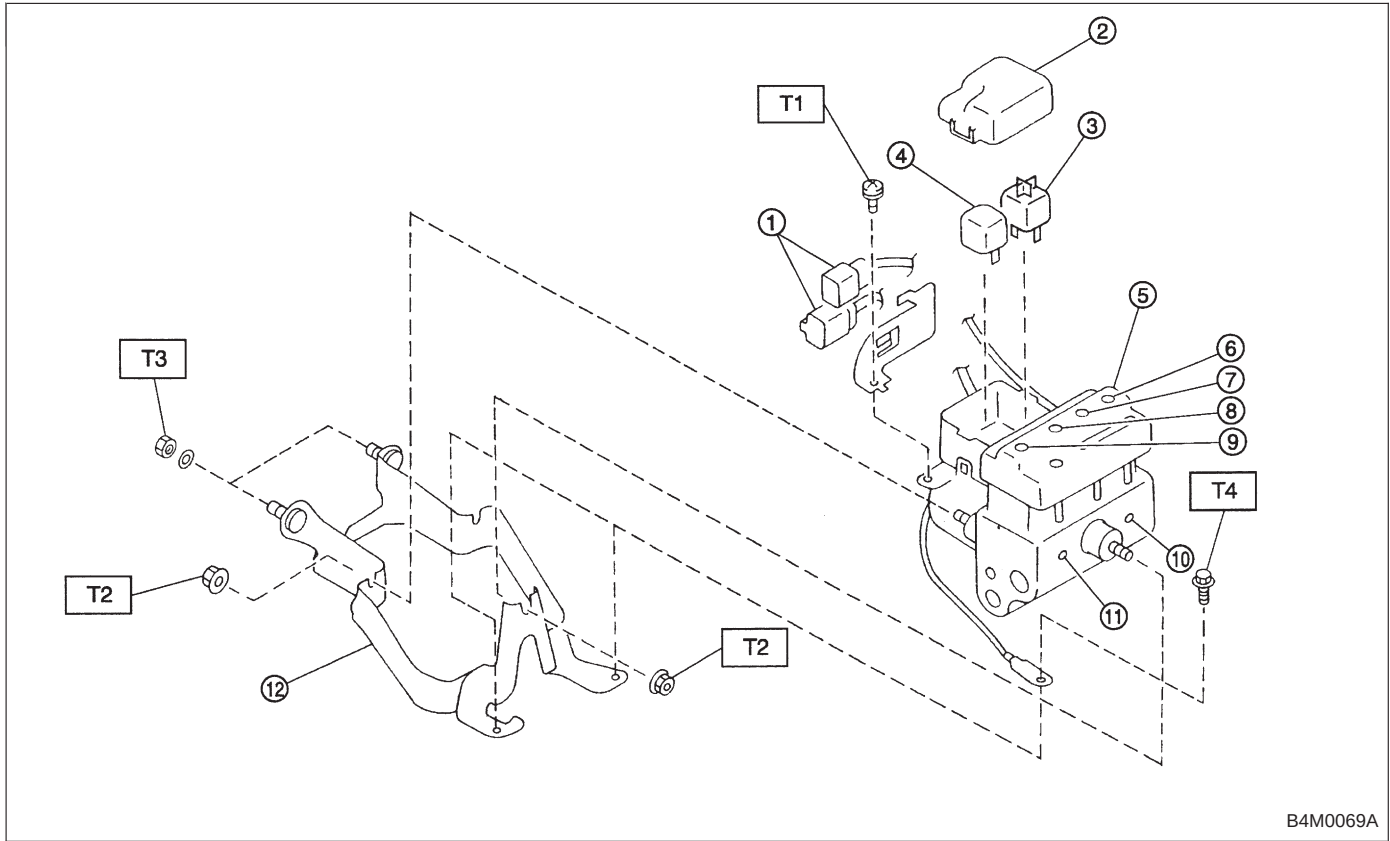


- ① Connector
- ② Cap
- ③ Motor relay
- ④ Valve relay
- ⑤ Hydraulic control unit
- ⑥ Front-RH outlet
- ⑦ Rear-LH outlet
- ⑧ Rear-RH outlet

- ⑨ Front-LH outlet
- ⑩ Primary inlet
- ⑪ Secondary inlet
- ⑫ Bracket

Tightening torque: N·m (kg·m, ft·lb)
T1: 1.2±0.2
(0.125±0.025, 0.9±0.2)
T2: 18±5 (1.8±0.5, 13.0±3.6)
T3: 29±7 (3.0±0.7, 21.7±5.1)
T4: 32±10 (3.3±1.0, 24±7)

3. SENSOR AND CONTROL MODULE (ABS 5.3 TYPE)

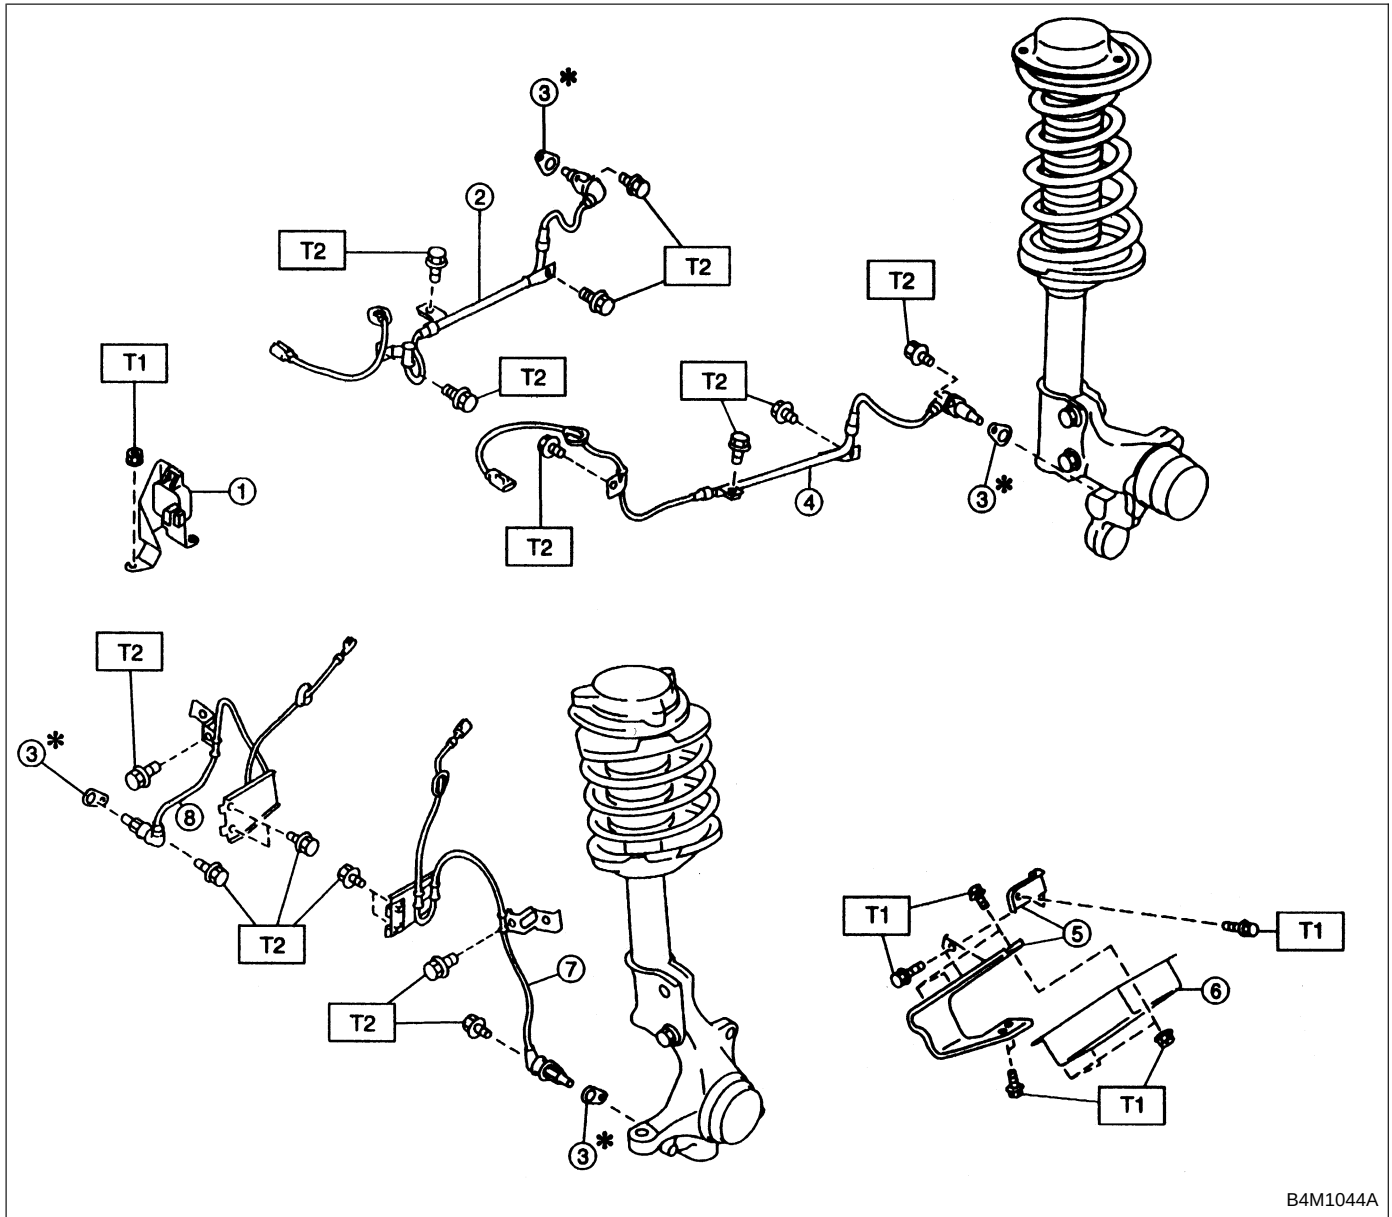


B4M1044A

① G sensor (AWD only)	⑤ Bracket
② Rear ABS sensor RH	⑥ ABS control module
③ ABS spacer	⑦ Front ABS sensor LH
④ Rear ABS sensor LH	⑧ Front ABS sensor RH

Tightening torque: N·m (kg·m, ft·lb)
T1: 7.4±2.0 (0.75±0.2, 5.4±1.4)
T2: 32±10 (3.3±1.0, 24±7)

4. HYDRAULIC CONTROL UNIT (ABS 5.3 TYPE)

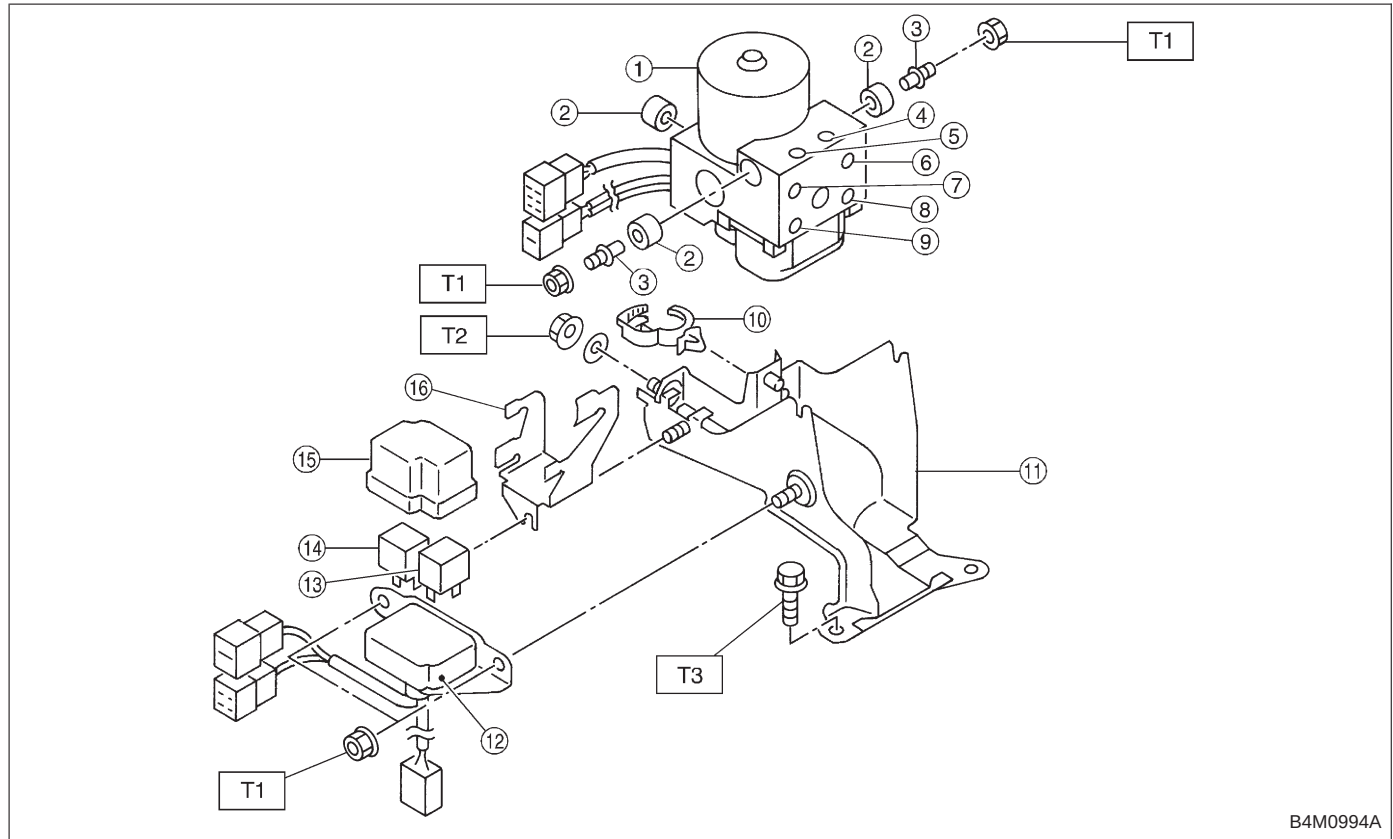

B4M0994A

- ① Hydraulic control unit
- ② Damper
- ③ Stud bolt
- ④ Rear-RH outlet
- ⑤ Rear-LH outlet
- ⑥ Secondary inlet
- ⑦ Primary inlet

- ⑧ Front-LH outlet
- ⑨ Front-RH outlet
- ⑩ Cable clip
- ⑪ Bracket
- ⑫ Relay box
- ⑬ Motor relay
- ⑭ Valve relay

- ⑮ Cap
- ⑯ Connector bracket

Tightening torque: N·m (kg·m, ft·lb)
T1: 18±5 (1.8±0.5, 13.0±3.6)
T2: 29±7 (3.0±0.7, 21.7±5.1)
T3: 32±10 (3.3±1.0, 24±7)