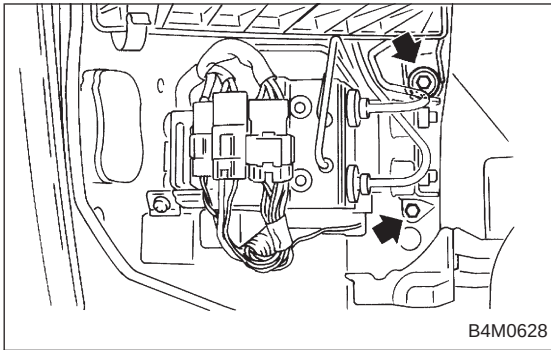


**G: INSTALLATION**

- 1) Install hydraulic unit and bracket.

Tightening torque:

32 ± 7 N·m (3.3 ± 0.7 kg-m, 23.9 ± 5.1 ft-lb)


- 2) Connect brake pipes to their correct hydraulic unit connections. <Ref. to 4-4 [W18A3].>
- 3) Connect connector to hydraulic unit.
- 4) Install canister.
- 5) Install air cleaner case.
- 6) Install air intake duct.
- 7) Connect ground cable to battery.

CAUTION:

Cover relay securely with rubber boot.

21. ABS/TCS Control Module**A: REMOVAL**

- 1) Disconnect ground cable from battery.
- 2) Remove floor mat located under lower right side of front seat.

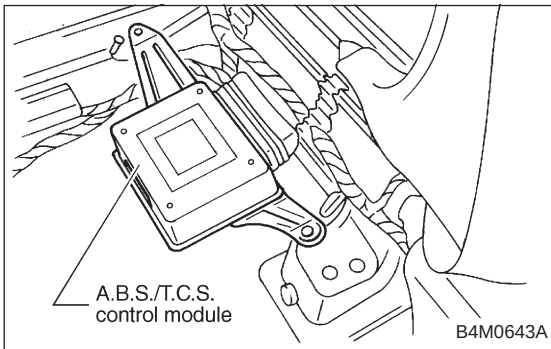

- 3) Remove screw which secure ABS/TCS control module from the body.
- 4) Disconnect connector from ABS/TCS control module.

B: INSPECTION

Check that connector is connected correctly and that connector terminal sliding resistance is correct.

C: INSTALLATION

- 1) Connect connector to ABS/TCS control module.
- 2) Install ABS/TCS control module on the body.

CAUTION:

- When installing seat rail, be careful no to have the harness caught in the rail.
- Cover the connector completely with rubber boot.