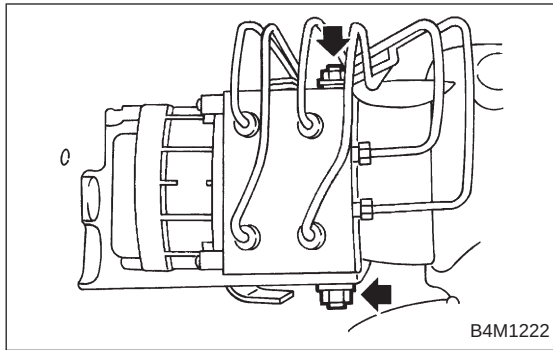


**E: INSTALLATION**

- 1) Install ABSCM&H/U.

CAUTION:

Confirm that the specifications of the ABSCM&H/U conforms to the vehicle specifications.

Tightening torque:

18 ± 5 N·m (1.8 ± 0.5 kg·m, 13.0 ± 3.6 ft·lb)

- 2) Connect brake pipes to their correct ABSCM&H/U connections. <Ref. to 4-4 [W18A4].>

- 3) Using cable clip, secure ABSCM&H/U harness to bracket.

- 4) Connect connector to ABSCM&H/U.

CAUTION:

- Be sure to remove all foreign matter from inside the connector before connecting.
- Ensure that the ABSCM&H/U connector is securely locked.

- 5) Install air intake duct.

- 6) Connect ground cable to battery.

- 7) Bleed air from the brake system.

23. ABS Sensor (ABS 5.3i Type)

<Ref. to 4-4 [W1400].>

24. G Sensor (ABS 5.3i Type)

<Ref. to 4-4 [W1700].>