


1. Transfer Case and Extension (AWD Model)

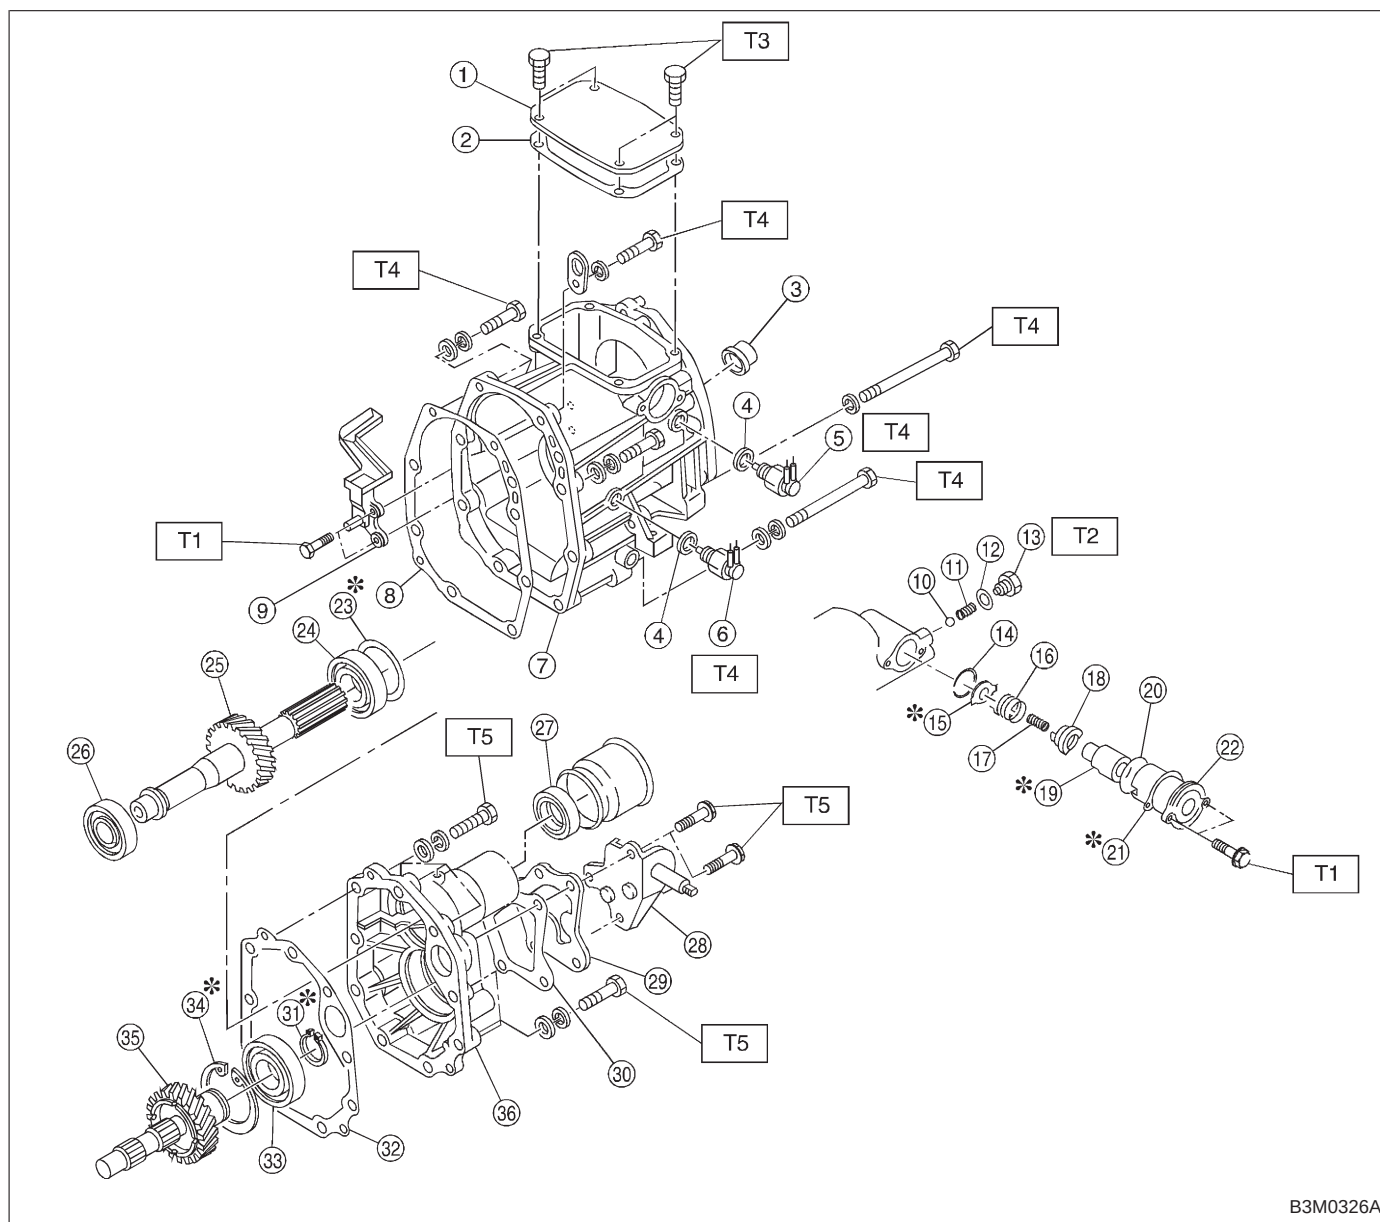

- ① Transfer cover
- ② Cover gasket
- ③ Oil seal
- ④ Gasket
- ⑤ Neutral switch
- ⑥ Back-up light switch
- ⑦ Transfer case
- ⑧ Gasket
- ⑨ Oil guide
- ⑩ Ball
- ⑪ Reverse accent spring
- ⑫ Gasket
- ⑬ Plug
- ⑭ Snap ring (Inner)
- ⑮ Reverse check plate

- ⑯ Reverse check spring
- ⑰ Reverse return spring
- ⑱ Reverse check cam
- ⑲ Reverse accent shaft
- ⑳ O-ring
- ㉑ Adjusting select shim
- ㉒ Reverse check sleeve
- ㉓ Adjusting washer
- ㉔ Ball bearing
- ㉕ Transfer driven gear
- ㉖ Ball bearing
- ㉗ Oil seal
- ㉘ Shift bracket
- ㉙ Extension cover
- ㉚ Gasket

- ⑳ Snap ring (Outer-30)
- ㉑ Gasket
- ㉒ Ball bearing
- ㉓ Snap ring (Inner-72)
- ㉔ Transfer drive gear
- ㉕ Extension

Tightening torque: N·m (kg-m, ft-lb)

T1: 5±1 (0.5±0.1, 3.6±0.7)

T2: 10±1 (1.0±0.1, 7.2±0.7)

T3: 15.7±1.5
(1.6±0.15, 11.6±1.1)

T4: 25±2 (2.5±0.2, 18.1±1.4)

T5: 37±3 (3.8±0.3, 27.5±2.2)