


7. Electrical Unit Location

Electrical unit	Refer to;
A.B.S. control module	4-4a [T300]
A.B.S. G sensor (MT)	4-4a [T300]
A/C compressor relay	⑦
A/C fuse	⑪
A/C main fan relay 1	⑩
A/C main fan relay 2	⑧
A/C pressure switch	②
A/C sub fan relay 2	⑨
ATF temperature sensor	2-7 [T2B1]
Blower motor resistor	⑫
Blower relay	⑬
Camshaft position sensor	2-7 [T2A2]
Check connector	⑤
Clutch switch (MT)	6-2 [T300]
Crankshaft position sensor	2-7 [T2A2]
Cruise control module	6-2 [T300]
Cruise control pump	6-2 [T300]
Data link connector (for OBD-II G.S.T.)	2-7 [T2A1]
Data link connector (for S.S.M.)	2-7 [T2A1]
Diagnosis connector	4-4a [T300]
Diagnosis terminal (Ground)	4-4a [T300]
Door lock timer	⑳
Engine control module	2-7 [T2A1]
Engine coolant temperature sensor	2-7 [T2A2]
Engine hood switch (Security)	6-2 [K6A0]
Evaporator thermoswitch	⑳
F/B	⑮
FRESH/RECIRC actuator	⑳
Fuel pump relay	2-7 [T2A3]
Fuel gauge module	⑩
Fuel gauge sub module (AWD)	⑫
FWD switch (AT)	①
Headlight alarm relay (Security)	6-2 [K6A0]
Headlight relay LH	⑤
Headlight relay RH	⑥
Horn relay	⑭

Electrical unit	Refer to;
Hydraulic unit (A.B.S.)	4-4a [T300]
Ignition coil	2-7 [T2A3]
Ignitor	2-7 [T2A3]
Idle air control solenoid valve	2-7 [T2A3]
Illumination control module	⑫
Inhibitor switch	6-2 [T300]
Knock sensor	2-7 [T2A2]
Main fan relay	⑬
Main relay	2-7 [T2A3]
Mass air flow sensor	2-7 [T2A2]
Mode actuator	⑫
M/B	④
Oil pressure switch	③
Oxygen sensor	2-7 [T2A2]
Pedal stroke sensor (T.C.S.)	4-4b [T300]
Power window and sunroof relay	⑭
Power window circuit breaker	⑭
Purge control solenoid valve	2-7 [T2A3]
Rear defogger relay	⑰
Seat belt timer	⑳
Security control module	6-2 [K6A0]
Shift lock control module	⑫
Starter interrupt relay (Security)	6-2 [K6A0]
Stop & brake switch (With cruise control)	6-2 [T300]
Sunroof control module	⑬
Tail and illumination relay	⑮
T.C.S. control module	4-4b [T300]
T.C.S. motor relay	4-4b [T300]
T.C.S. valve relay	4-4b [T300]
Throttle position sensor	2-7 [T2A2]
Test mode connector	2-7 [T2A1]
Transmission control module	2-7 [T2B1]
Turn & hazard module	⑮
Vehicle speed sensor 1	2-7 [T2B1]
Vehicle speed sensor 2	2-7 [T2B1]


1. ENGINE ROOM

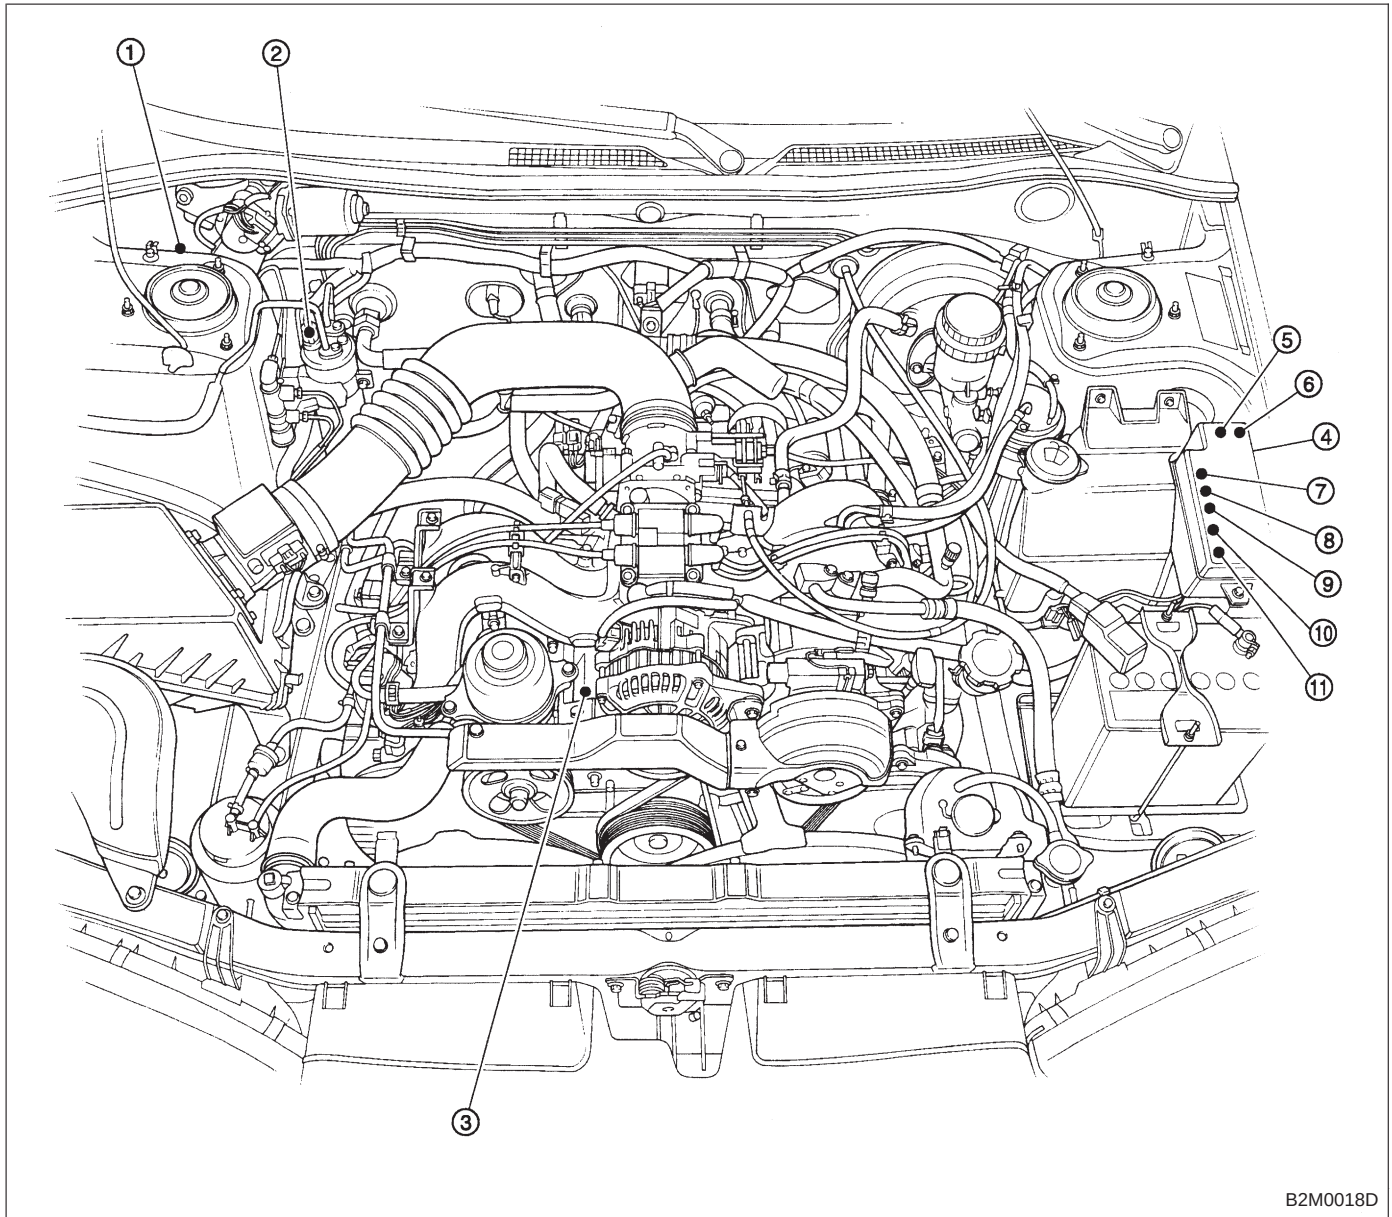

B2M0018D

① FWD switch (AT)	⑦ A/C compressor relay
② A/C pressure switch	⑧ A/C main fan relay 2
③ Oil pressure switch	⑨ A/C sub fan relay 2
④ M/B	⑩ A/C main fan relay 1
⑤ Headlight relay LH	⑪ A/C fuse
⑥ Headlight relay RH	

2. INSTRUMENT PANEL

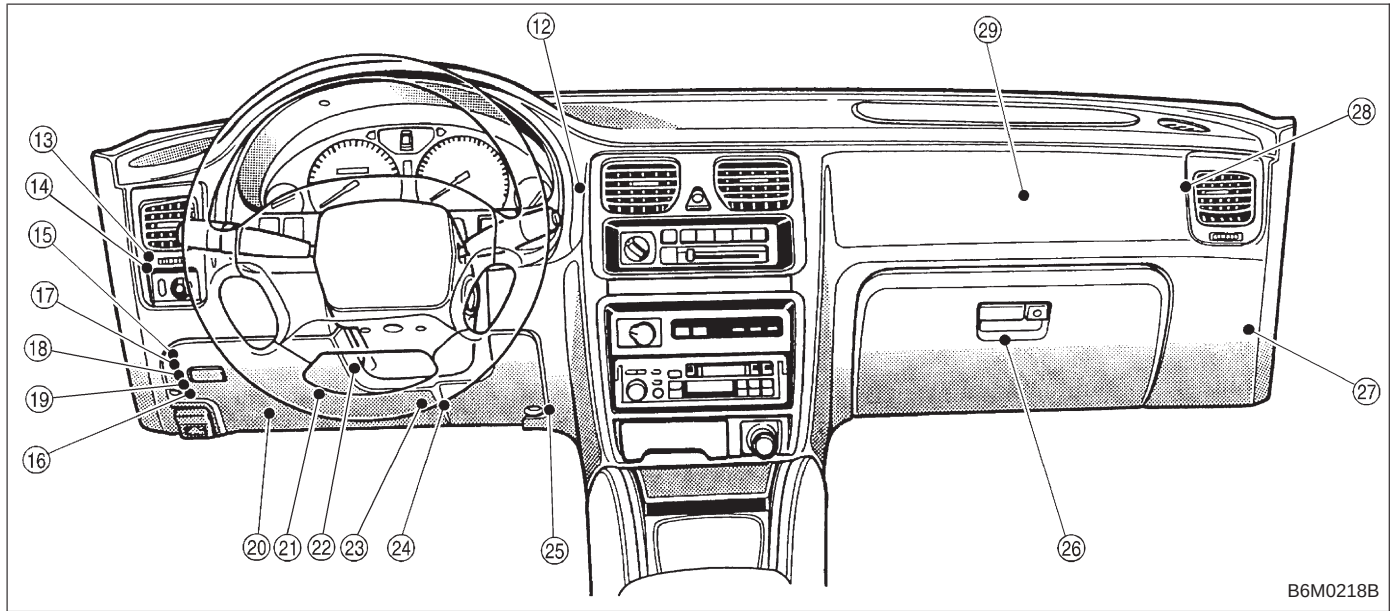


B6M0218B


⑫ Mode actuator	⑳ Illumination control module
⑬ Blower relay	㉑ Shift lock control module
⑭ Horn relay	㉒ Power window circuit breaker
⑮ F/B	㉓ Power window & sunroof relay
⑯ Turn & hazard module	㉔ Check connector
⑰ Rear defogger relay	㉕ Blower motor resistor
⑱ Tail & illumination relay	㉖ Door lock timer
㉑ Main fan relay	㉗ FRESH/RECIRC actuator
㉒ Seat belt timer	㉘ Evaporator thermoswitch

3. COMPARTMENT

● SEDAN

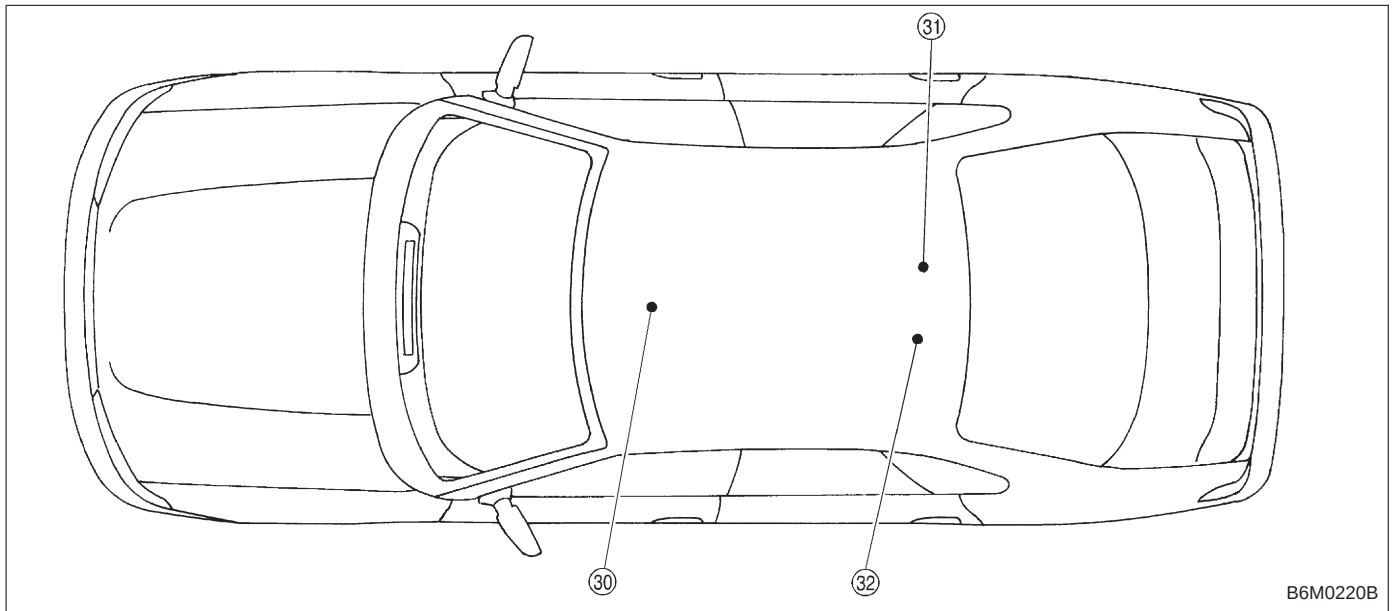


● WAGON

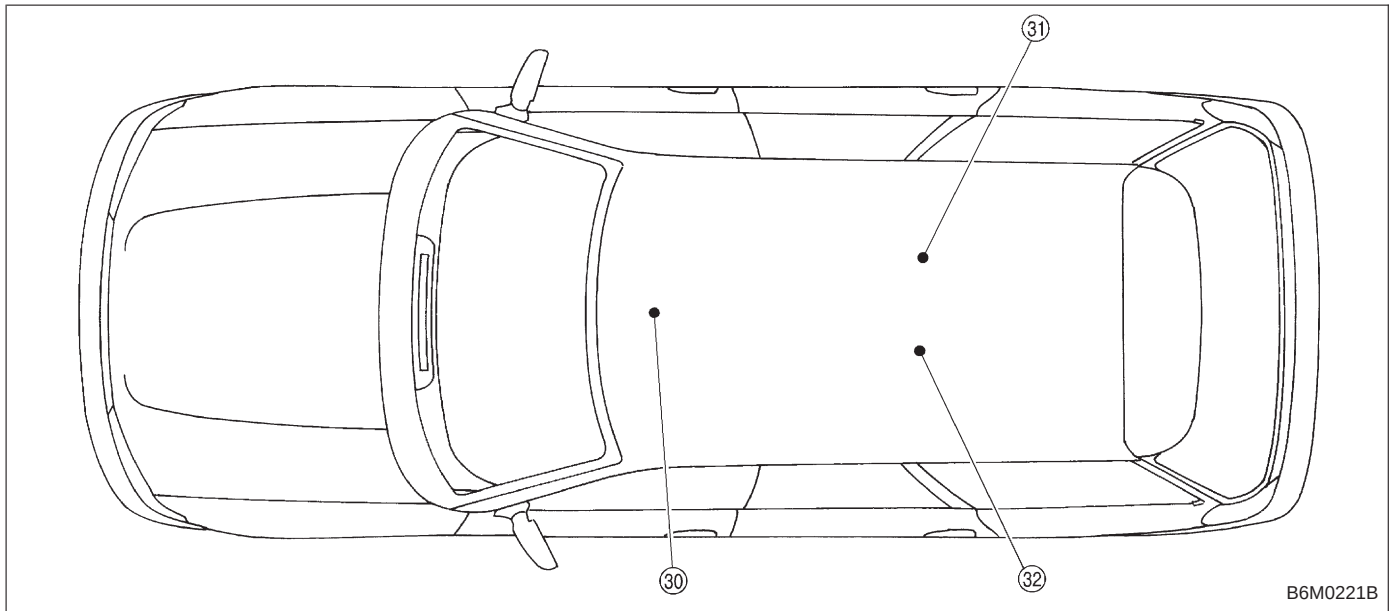


- ③① Sunroof control module
- ③① Fuel gauge module


- ③② Fuel gauge sub module (AWD)

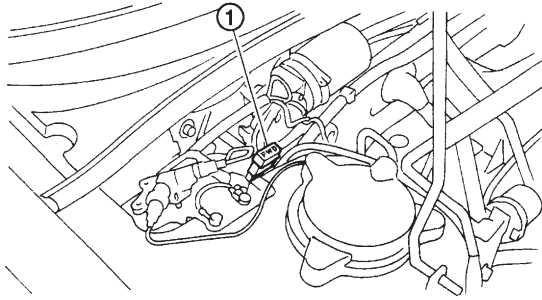


B6M0222A

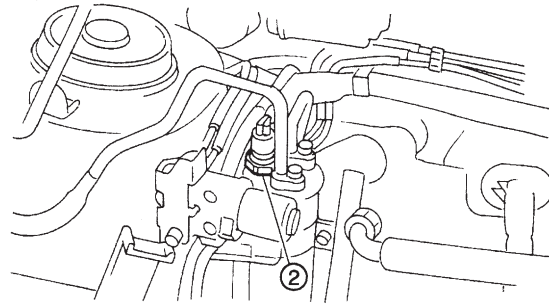


B6M0223A

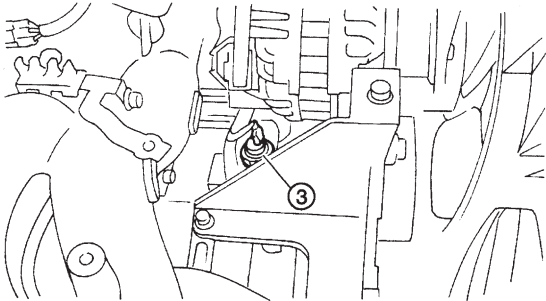


B6M0224A

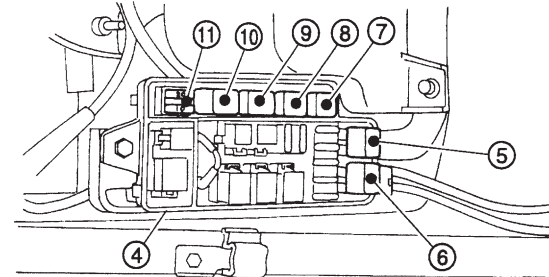


B6M0225A

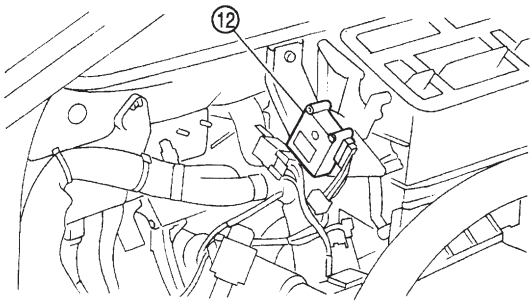


B6M0226A

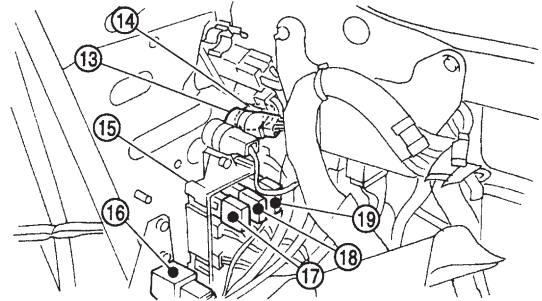


B6M0227A

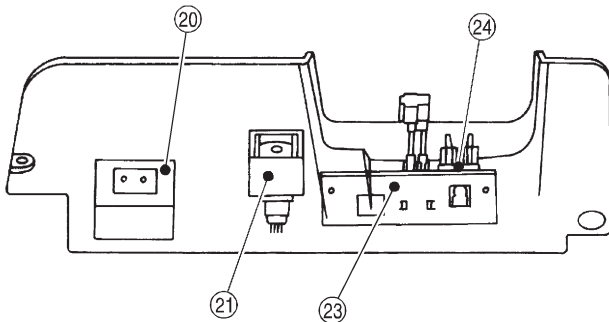


B6M0494A

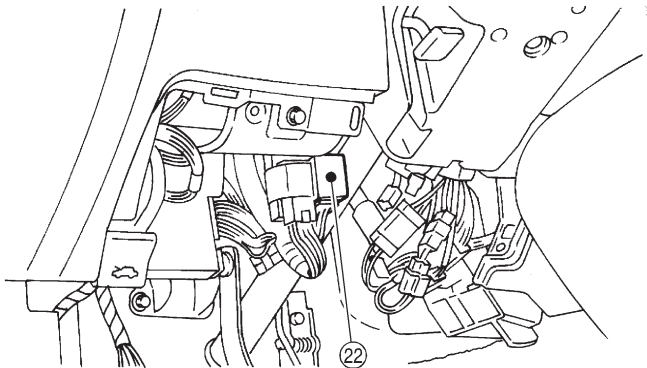


B6M0493A

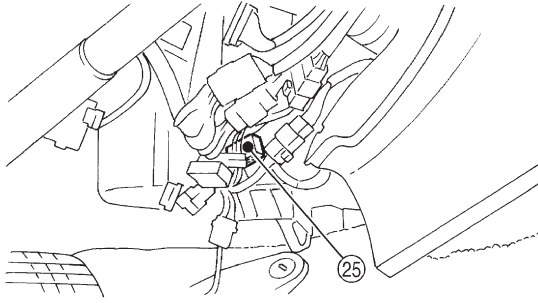


B6M0230B

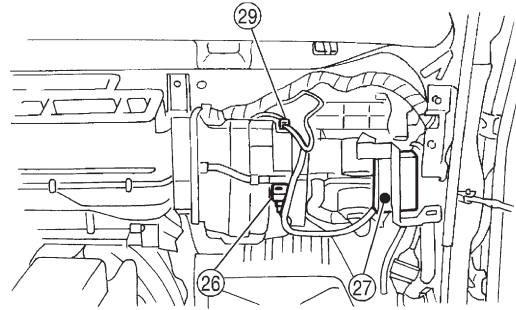


B6M0231B

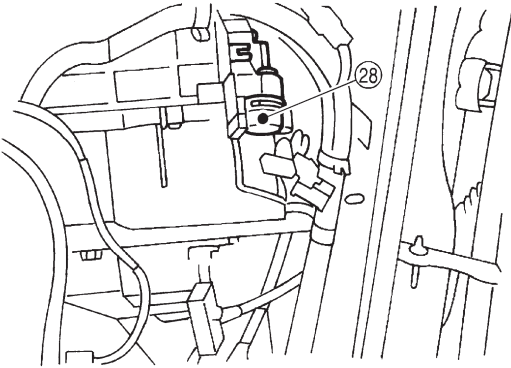

B6M0495A

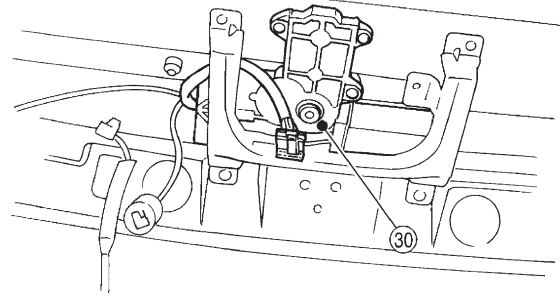

B6M0233B

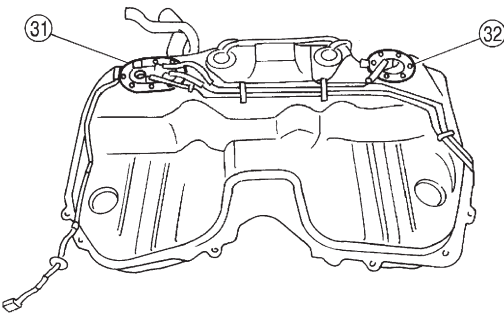

B6M0235B

SUBARU.