


4. Datum Points and Dimensions Concerning On-Board Aiming Adjustment

If headlight aiming is misaligned due to damaged body panel, repair headlight mating surface using body and headlight datum points as a guide.

NOTE:

It is recommended to conduct On-Board Aiming Adjustment with headlights turned off.

If turned on during the adjustment, the duration should be within two minutes.

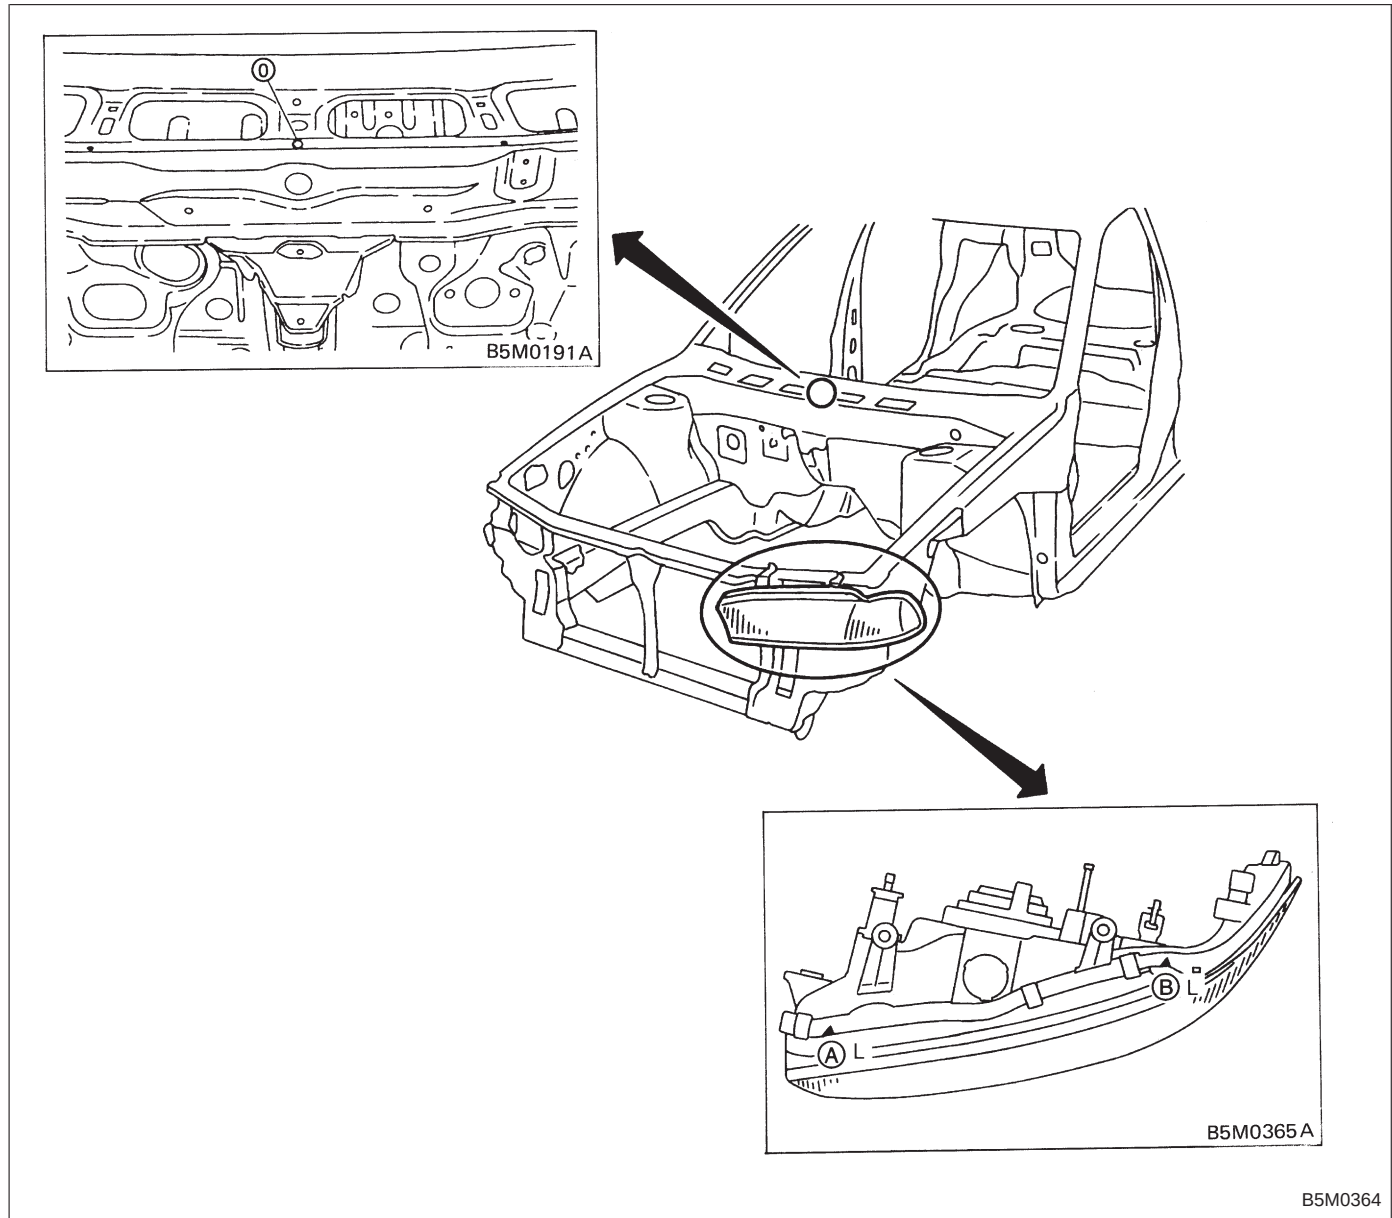

Unit: mm (in)

$$\begin{matrix} 0 - A_L \\ 0 - A_R \end{matrix} \left. \vphantom{\begin{matrix} 0 - A_L \\ 0 - A_R \end{matrix}} \right\} : 1,015 (39.96)$$

$$\begin{matrix} 0 - B_L \\ 0 - B_R \end{matrix} \left. \vphantom{\begin{matrix} 0 - B_L \\ 0 - B_R \end{matrix}} \right\} : 1,057 (41.61)$$