

1. Supplemental Restraint System "Airbag"

Airbag system wiring harness is routed on and along body panels.

CAUTION:

- All Airbag system wiring harness and connectors are colored yellow. Do not use electrical test equipment on these circuits.
- Be careful not to damage Airbag system wiring harness when repairing the body panel.


2. Body Datum Points

Various master repair locations are established as datum points used during body repairs. In addition, guide holes, locators and indents are provided to facilitate panel replacement and achieve alignment accuracy.

NOTE:

Left and right datum points are all symmetrical to each other.


1. ENGINE COMPARTMENT AND ROOM

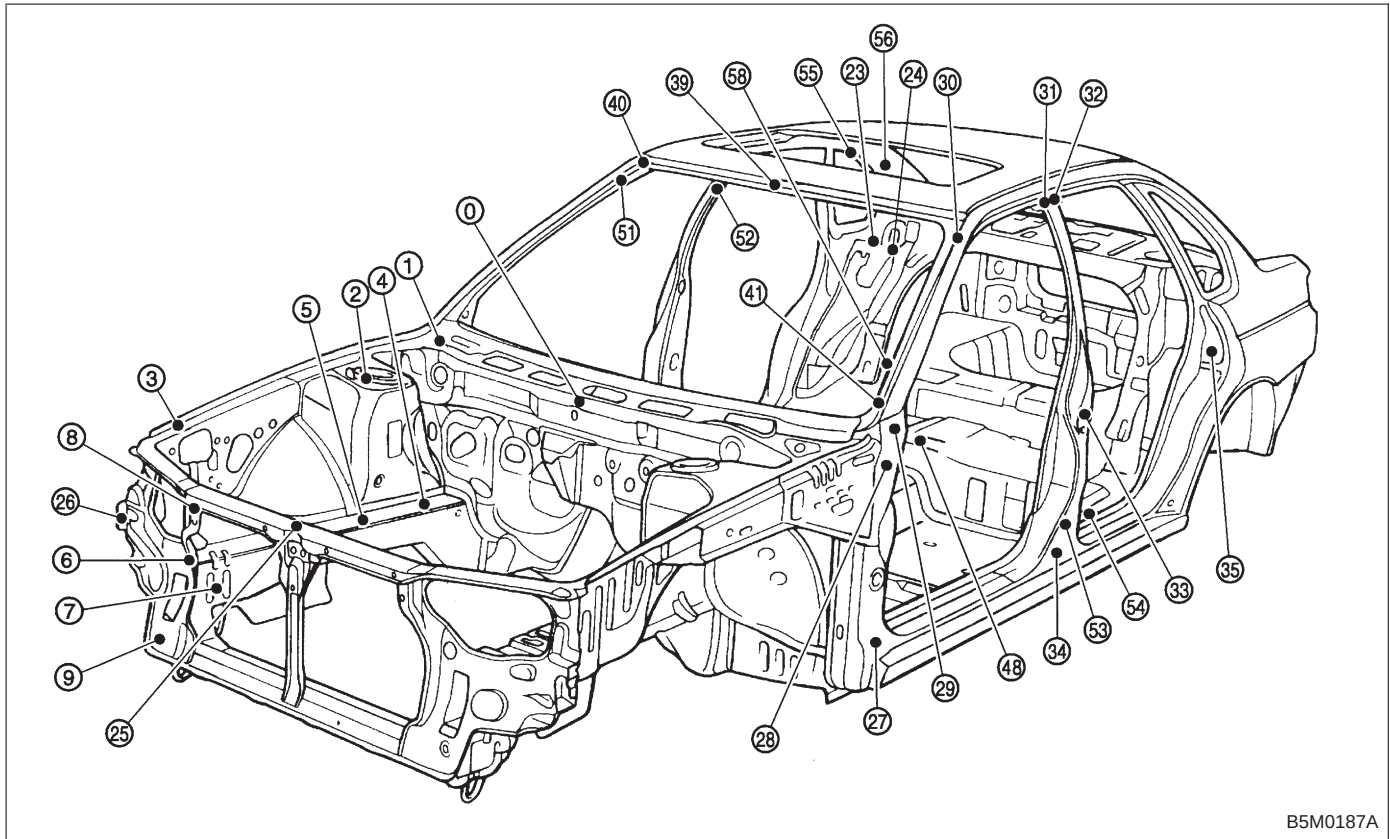

B5M0187A

① Cowl panel weather attaching hole 6 mm (0.24 in) dia.	③① Retainer attaching hole at center pillar (Front) 3.5 mm (0.138 in) dia.
① Hood hinge front attaching hole M8	③② Retainer attaching hole at center pillar (Rear) 3.5 mm (0.138 in) dia.
② Strut mount attaching hole (Front center) 9.5 mm (0.374 in) dia.	③③ Lower side of rear door hinge M8
③ Front fender attaching hole (Tip) M6	③④ Center pillar (LWR) gauge hole 27 mm (1.06 in) dia.
④ Rear upper surface of front side frame 12 mm (0.47 in) dia.	③⑤ Rear quarter outer corner patch attaching hole 5.2 mm (0.205 in) dia.
⑤ Middle upper surface of front side frame 20 mm (0.79 in) dia.	③⑥ Front rail center notch
⑥ Front side frame front upper surface 14 x 16 mm (0.55 x 0.63 in) dia. oblong hole	④① Front glass upper locating notch RH: 6.5 mm (0.256 in) dia., LH: 6.5 x 10 mm (0.256 x 0.39 in) dia. oblong hole
⑦ Side frame of front side frame 12 mm (0.47 in) dia.	④② Stud bolt lower locating notch
⑧ Headlight attaching hole at radiator side panel 6.2 x 9 mm (0.244 x 0.35 in) dia.	④③ Front center of rear floor pan 8 mm (0.31 in) dia.
⑨ Radiator panel side (LWR) gauge hole 23 mm (0.91 in) dia.	⑤① Front upper pillar (Inner) 7 mm (0.28 in) dia.
②③ Rear strut mount attaching hole (Side) 10 mm (0.39 in) dia.	⑤② Front seat belt adjust plate attaching hole 12 mm (0.47 in) dia.
②④ Rear strut mount attaching hole (Center) 12 mm (0.47 in) dia.	⑤③ Rear door hinge middle hole 10 mm (0.39 in) dia.
②⑤ Radiator panel (UPR) middle hole 6 mm (0.24 in) dia.	⑤④ Rear floor, near door 8 mm (0.31 in) dia.
②⑥ Front fender attaching hole at radiator panel side M6	⑤⑤ Trim upper attaching hole at 6 light 8 mm (0.31 in) dia.
②⑦ Front fender attaching hole at front pillar lower portion M6	⑤⑥ Trim lower attaching hole at 6 light 8 mm (0.31 in) dia.
②⑧ Hinge middle hole at front pillar center 10 mm (0.39 in) dia.	⑤⑦ Rear floor, near floor strut 15 x 20 mm (0.59 x 0.79 in) dia. oblong hole
②⑨ Front fender attaching hole at front pillar center portion M6	
③① Retainer attaching square hole at front pillar 7 x 7 mm (0.28 x 0.28 in)	


2. LUGGAGE COMPARTMENT AND ROOM (SEDAN)

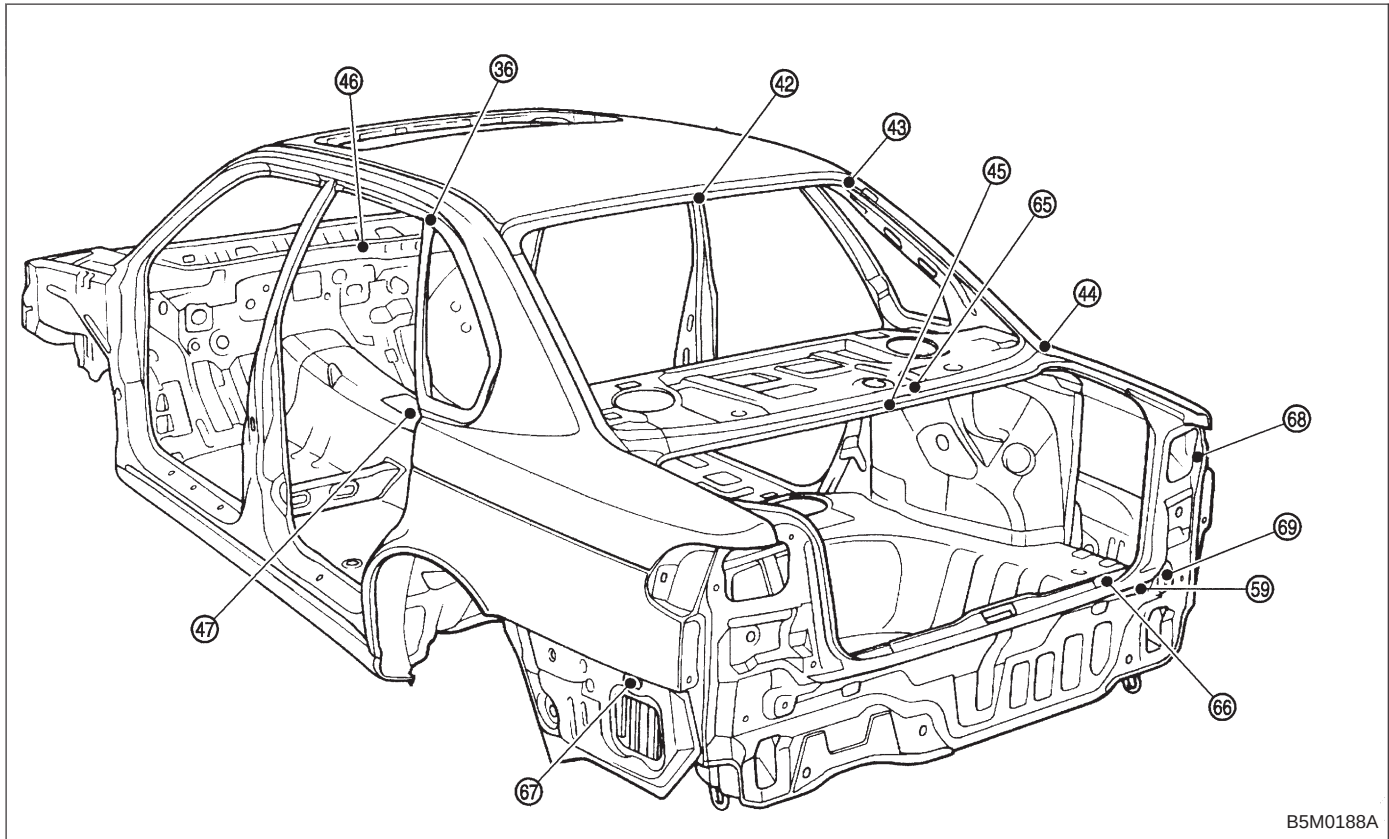

B5M0188A

- ③⑥ 6 light upper retainer attaching square hole 7 x 7 mm (0.28 x 0.28 in)
- ④② Rear rail center notch
- ④③ Rear glass upper locating hole RH: 6.5 mm (0.256 in) dia., LH: 6.5 x 10 mm (0.256 x 0.39 in) dia. oblong hole
- ④④ Rear glass molding attaching square hole 8 x 8 mm (0.31 x 0.31 in)
- ④⑤ Rear panel drain locator concave part
- ④⑥ Front panel gauge hole 10 mm (0.39 in) dia.
- ④⑦ Tunnel center M8
- ⑤⑨ Rear bumper attaching hole 45 mm (1.77 in) dia.
- ⑤⑤ Rear wiper attaching hole M6
- ⑤⑥ Trim attaching hole at rear skirt (UPR) 7 mm (0.28 in) dia.
- ⑤⑦ Rear bumper side attaching hole 6 mm (0.24 in) dia.
- ⑤⑧ Rear combination light mounting hole 8 mm (0.31 in) dia.
- ⑤⑨ Rear bumper beam attaching hole RH: 8 mm (0.31 in) dia., LH: 8 x 12 mm (0.31 x 0.47 in) dia. oblong hole


3. LUGGAGE COMPARTMENT AND ROOM (WAGON)

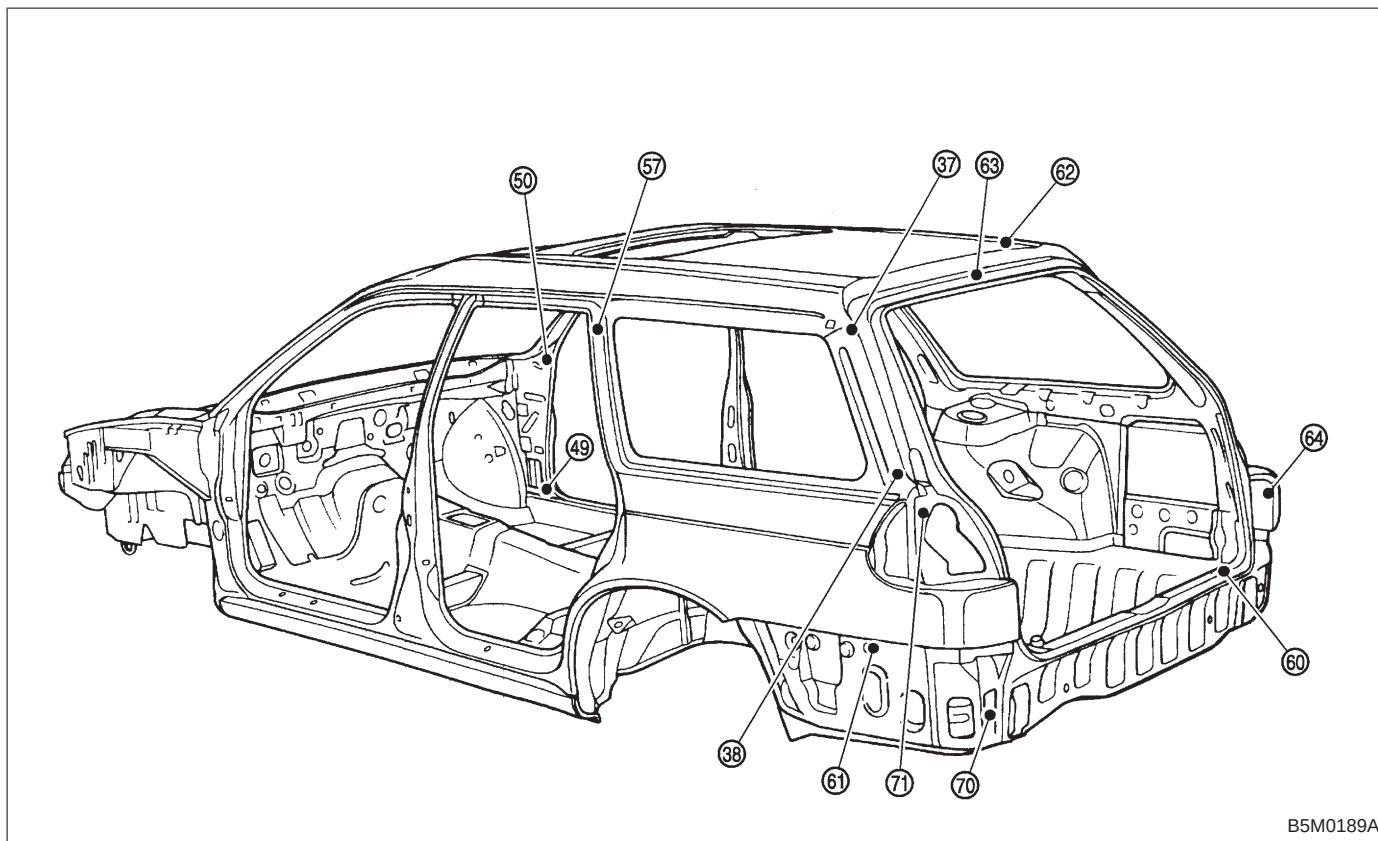

B5M0189A


- ③⑦ D pillar cover attaching hole 12 x 8 mm (0.47 x 0.31 in) dia.
- ③⑧ Shoulder mole attaching hole 8 mm (0.31 in) dia.
- ④⑧ Front pillar (LWR) gauge hole 10 mm (0.39 in) dia. (On both Sedan and Wagon)
- ⑤⑨ Front pillar (UPR) gauge hole 16 mm (0.63 in) dia. (On both Sedan and Wagon)
- ⑤⑦ Retainer attaching square hole at C pillar (UPR) 7 x 7 mm (0.28 x 0.28 in)
- ⑥⑩ Trim attaching hole at rear skirt (UPR) 15 mm (0.59 in) dia.
- ⑥① Rear bumper side attaching hole 6 mm (0.24 in) dia.
- ⑥② Rear seat belt bolt hole 13 mm (0.51 in) dia.
- ⑥③ Rear rail locator concave part
- ⑥④ Buffer attaching hole (UPR) M6
- ⑦⑩ Rear quarter end (LWR) gauge hole 20 mm (0.79 in) dia.
- ⑦① Rear combination light mounting hole 7 mm (0.28 in) dia.

4. UNDERBODY

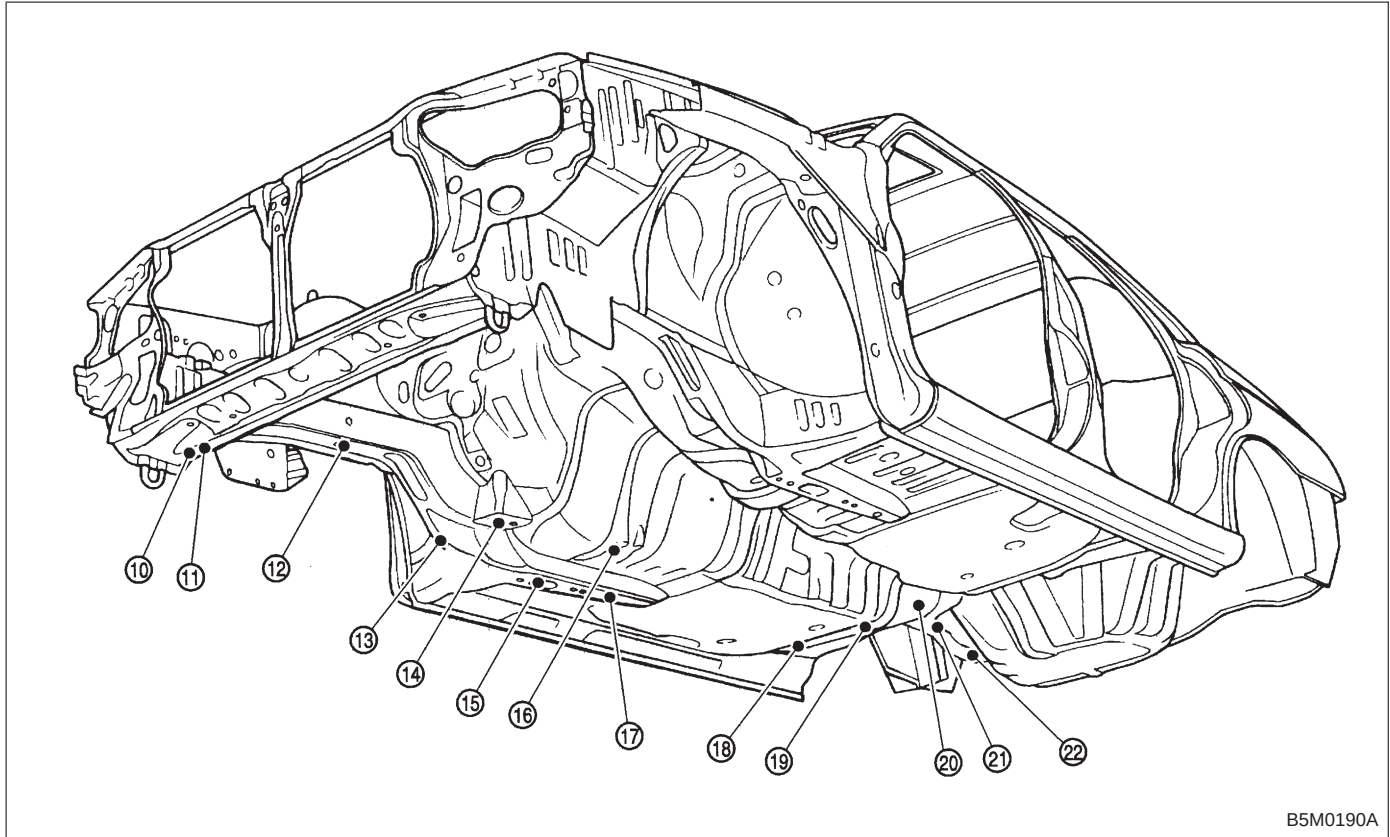


B5M0190A


- ⑩ Radiator panel (LWR) frame gauge hole 10 mm (0.39 in) dia.
- ⑪ Front side frame front lower surface 20 mm (0.79 in) dia.
- ⑫ Front side frame center lower surface 20 mm (0.79 in) dia.
- ⑬ Front suspension attaching hole M14
- ⑭ Suspension attaching bracket M14
- ⑮ Front side frame rear lower center surface 20 mm (0.79 in) dia.
- ⑯ Transmission mount attaching hole M10
- ⑰ Front side frame rear lower surface 15 mm (0.59 in) dia.
- ⑱ Rear frame front M12
- ⑲ Rear frame front hole 25 mm (0.98 in) dia.
- ⑳ Rear crossmember attaching hole M12
- ㉑ Rear frame center hole 7 mm (0.28 in) dia.
- ㉒ Rear frame rear concave part 15 mm (0.59 in) dia.

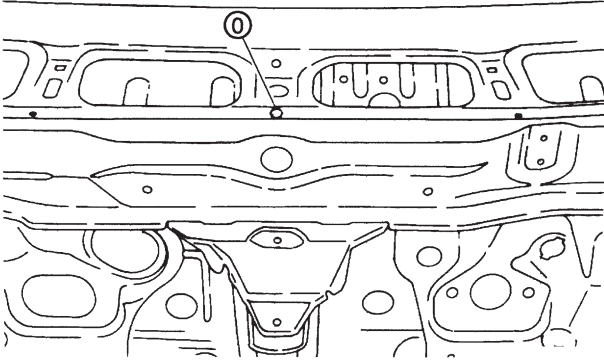


B5M0191A

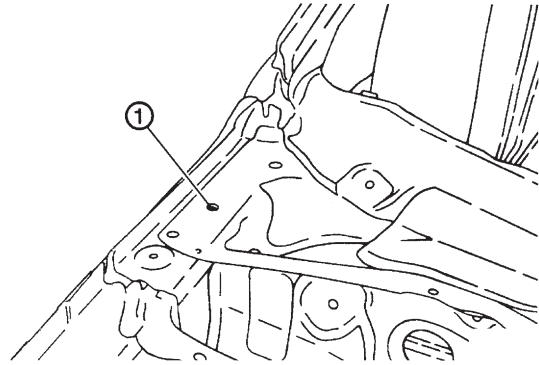


B5M0192A

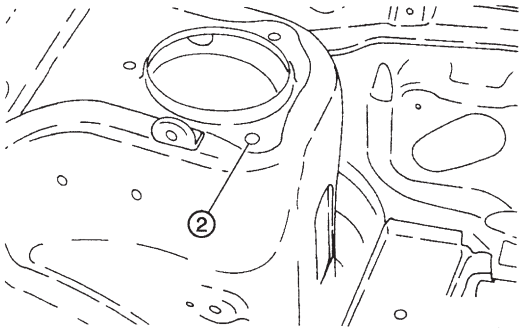


B5M0193A

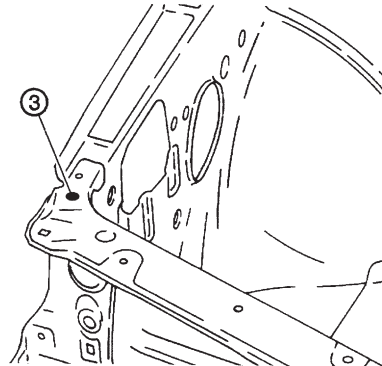


B5M0194A

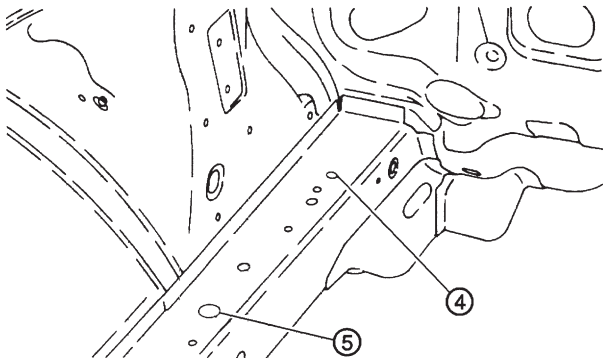


B5M0195A

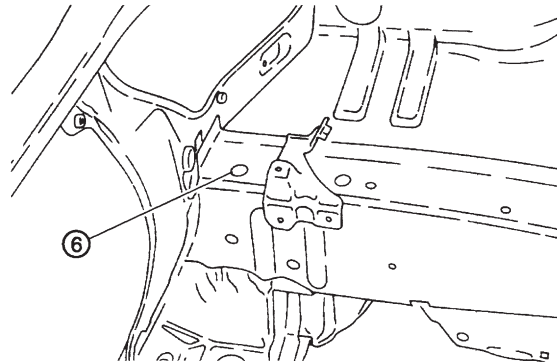









B5M0196A

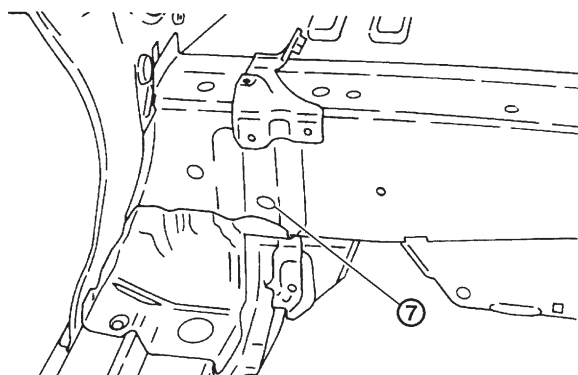


B5M0197A

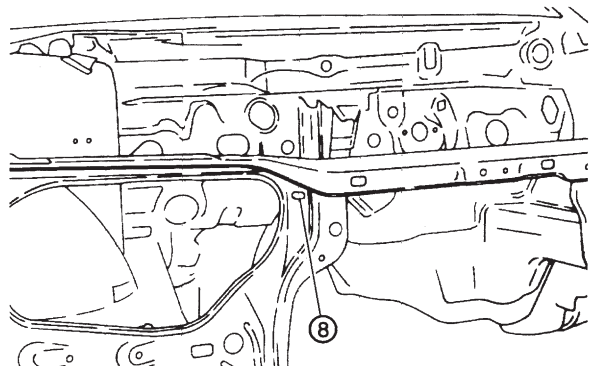


B5M0198A

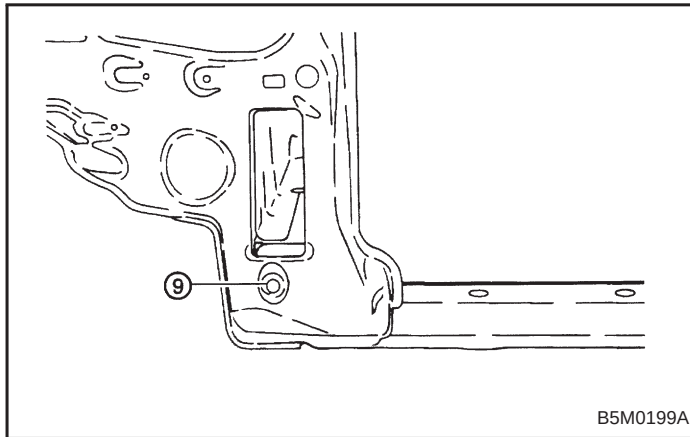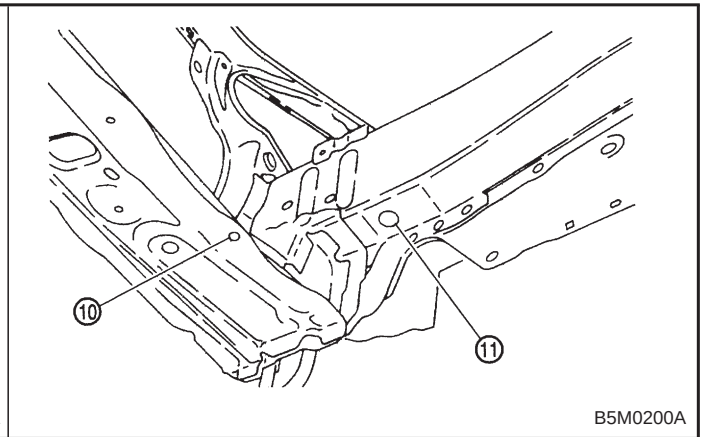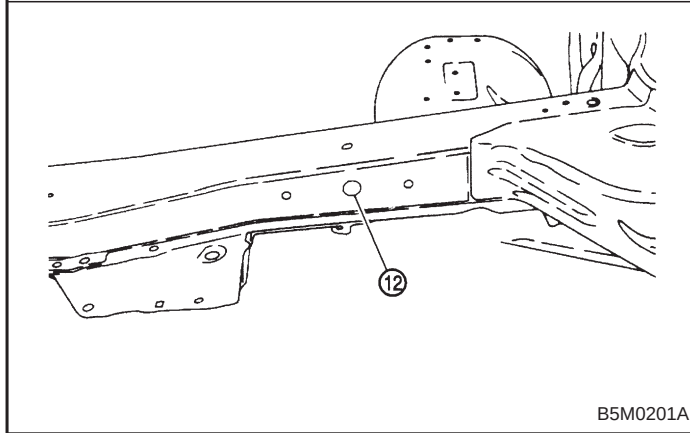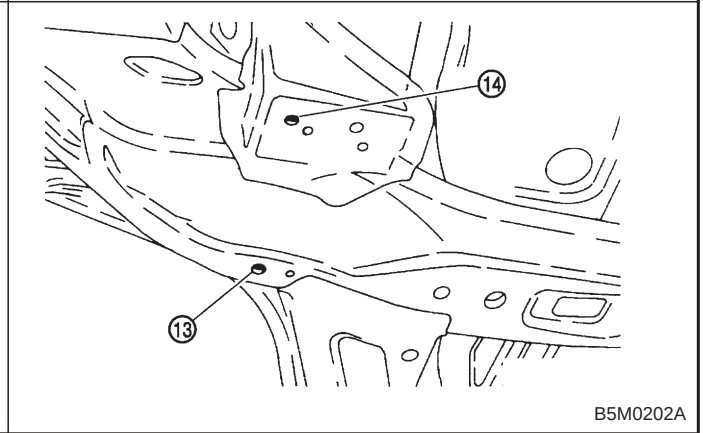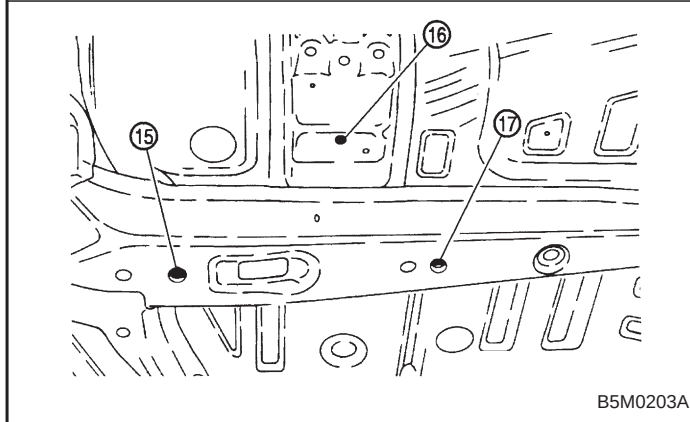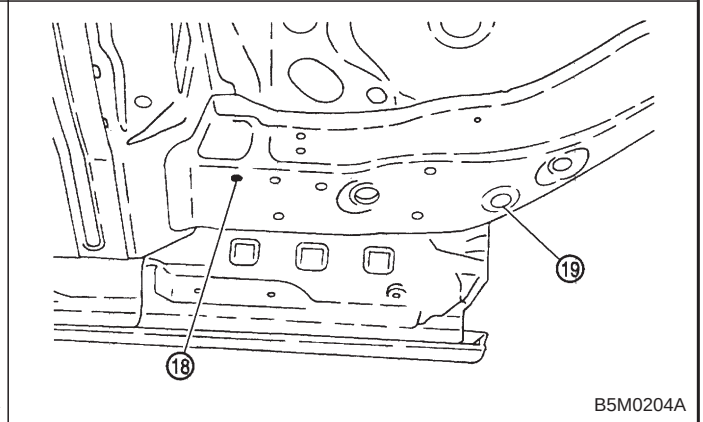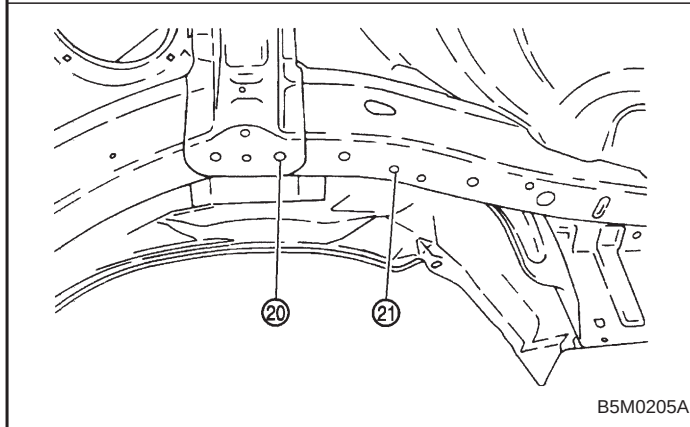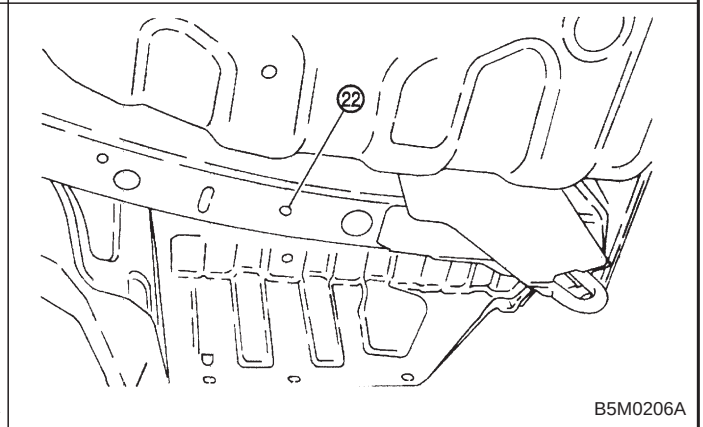


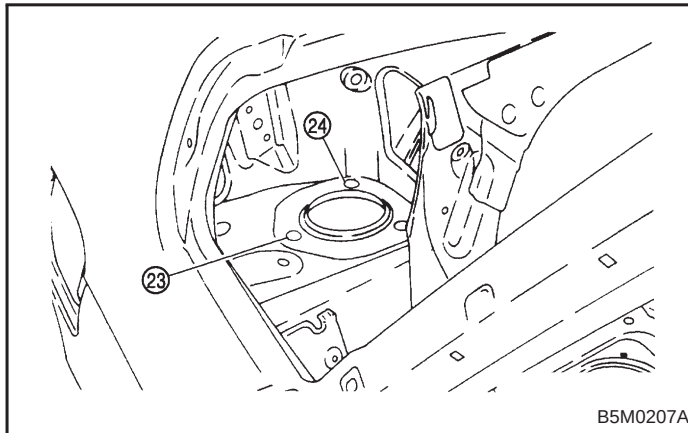


B5M0207A

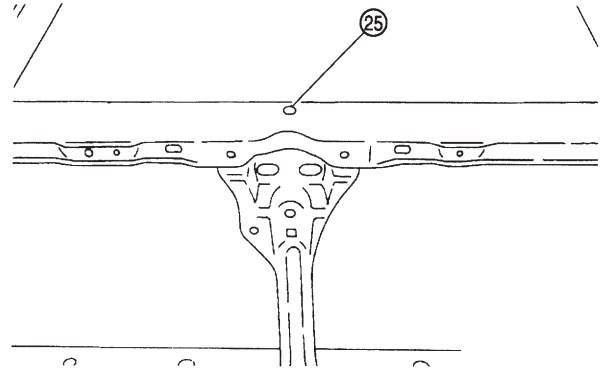


B5M0208A

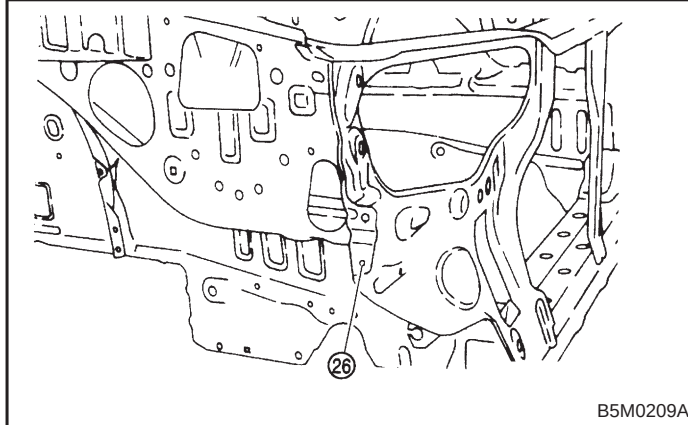


B5M0209A

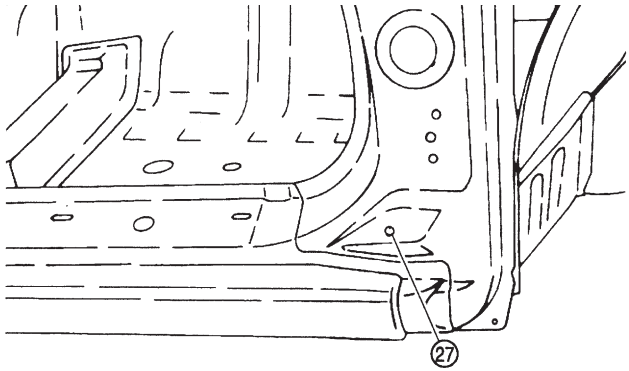


B5M0210A

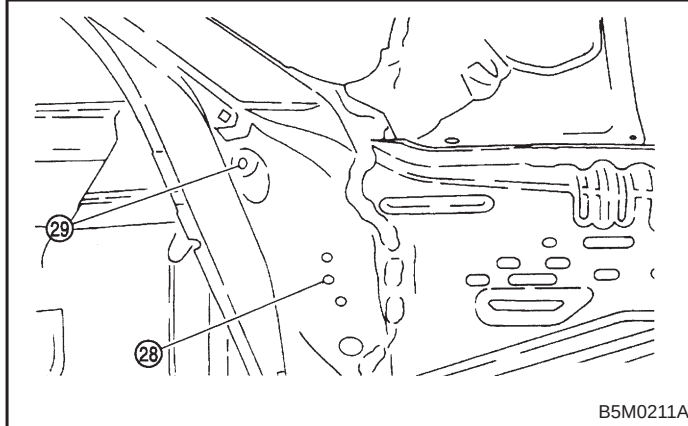


B5M0211A

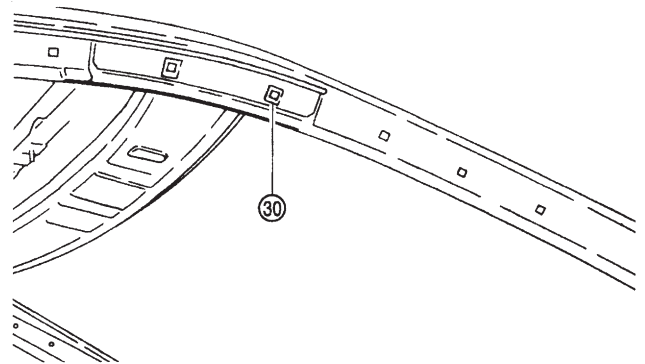

B5M0212A







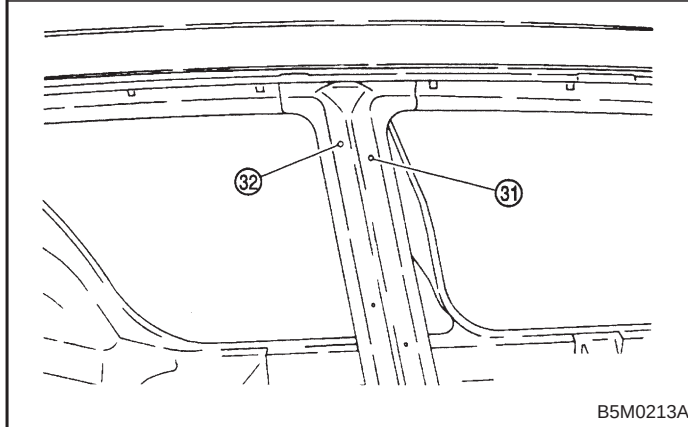



B5M0213A

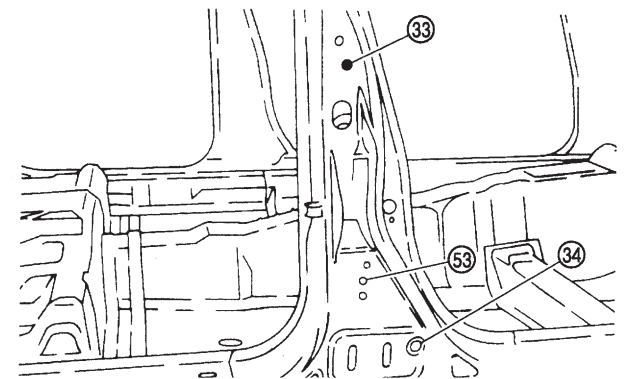









B5M0214A









2. Body Datum Points

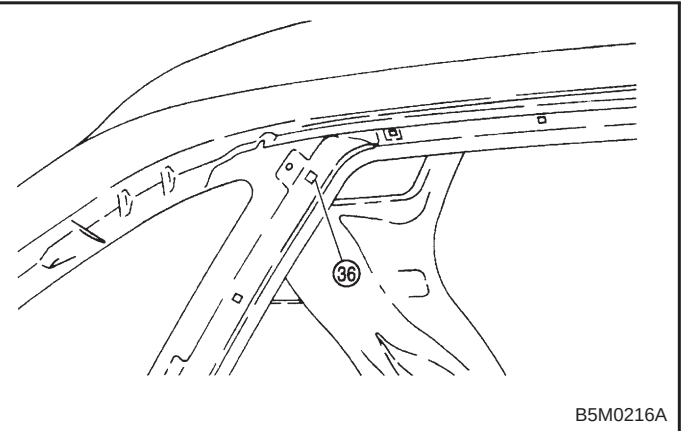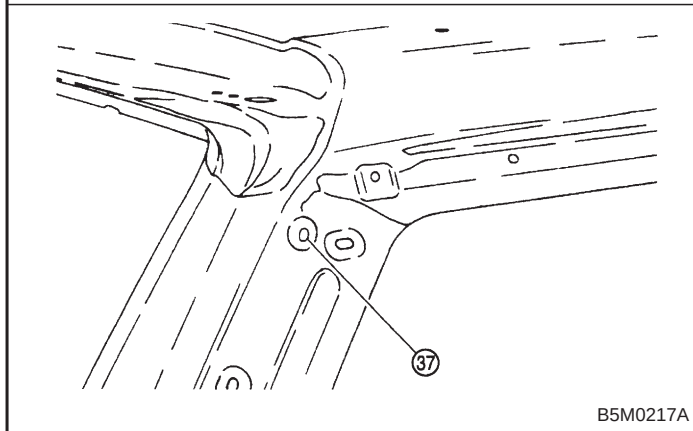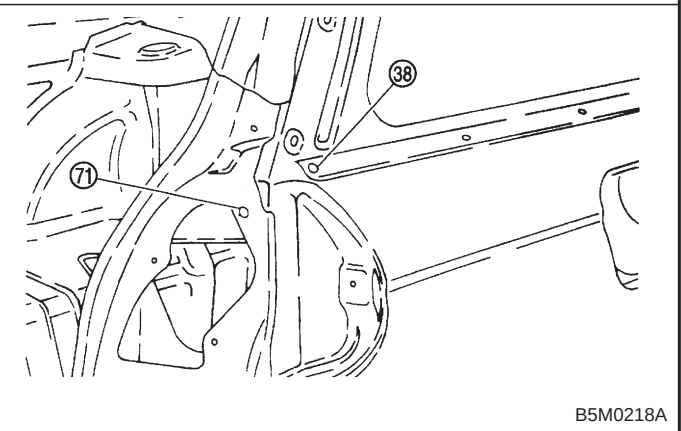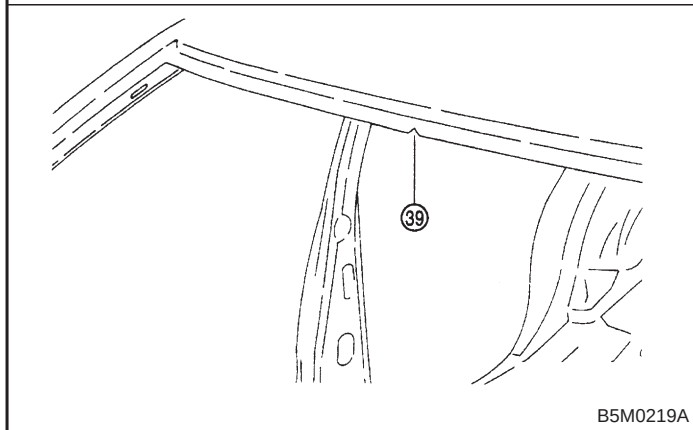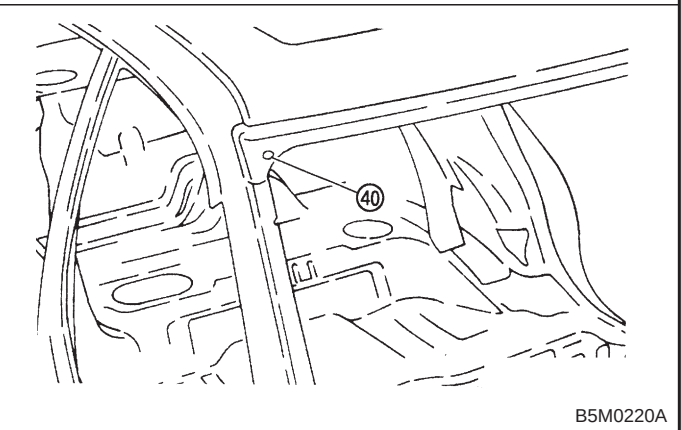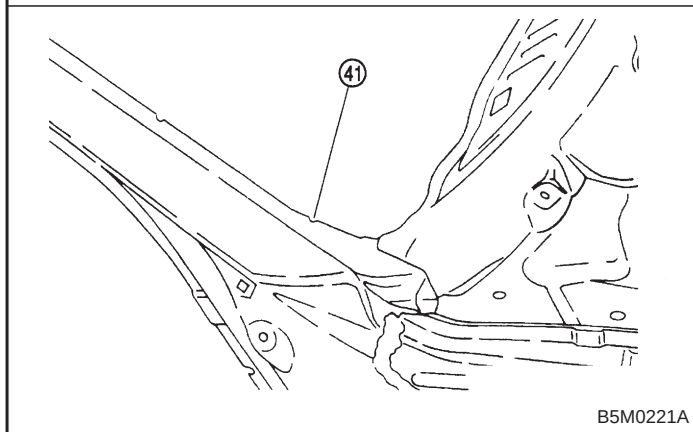
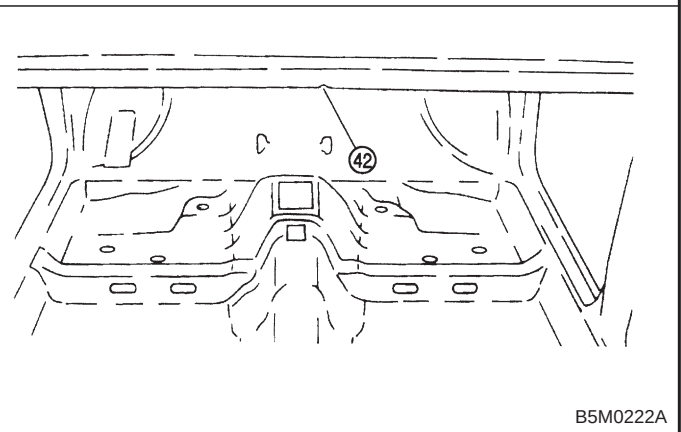


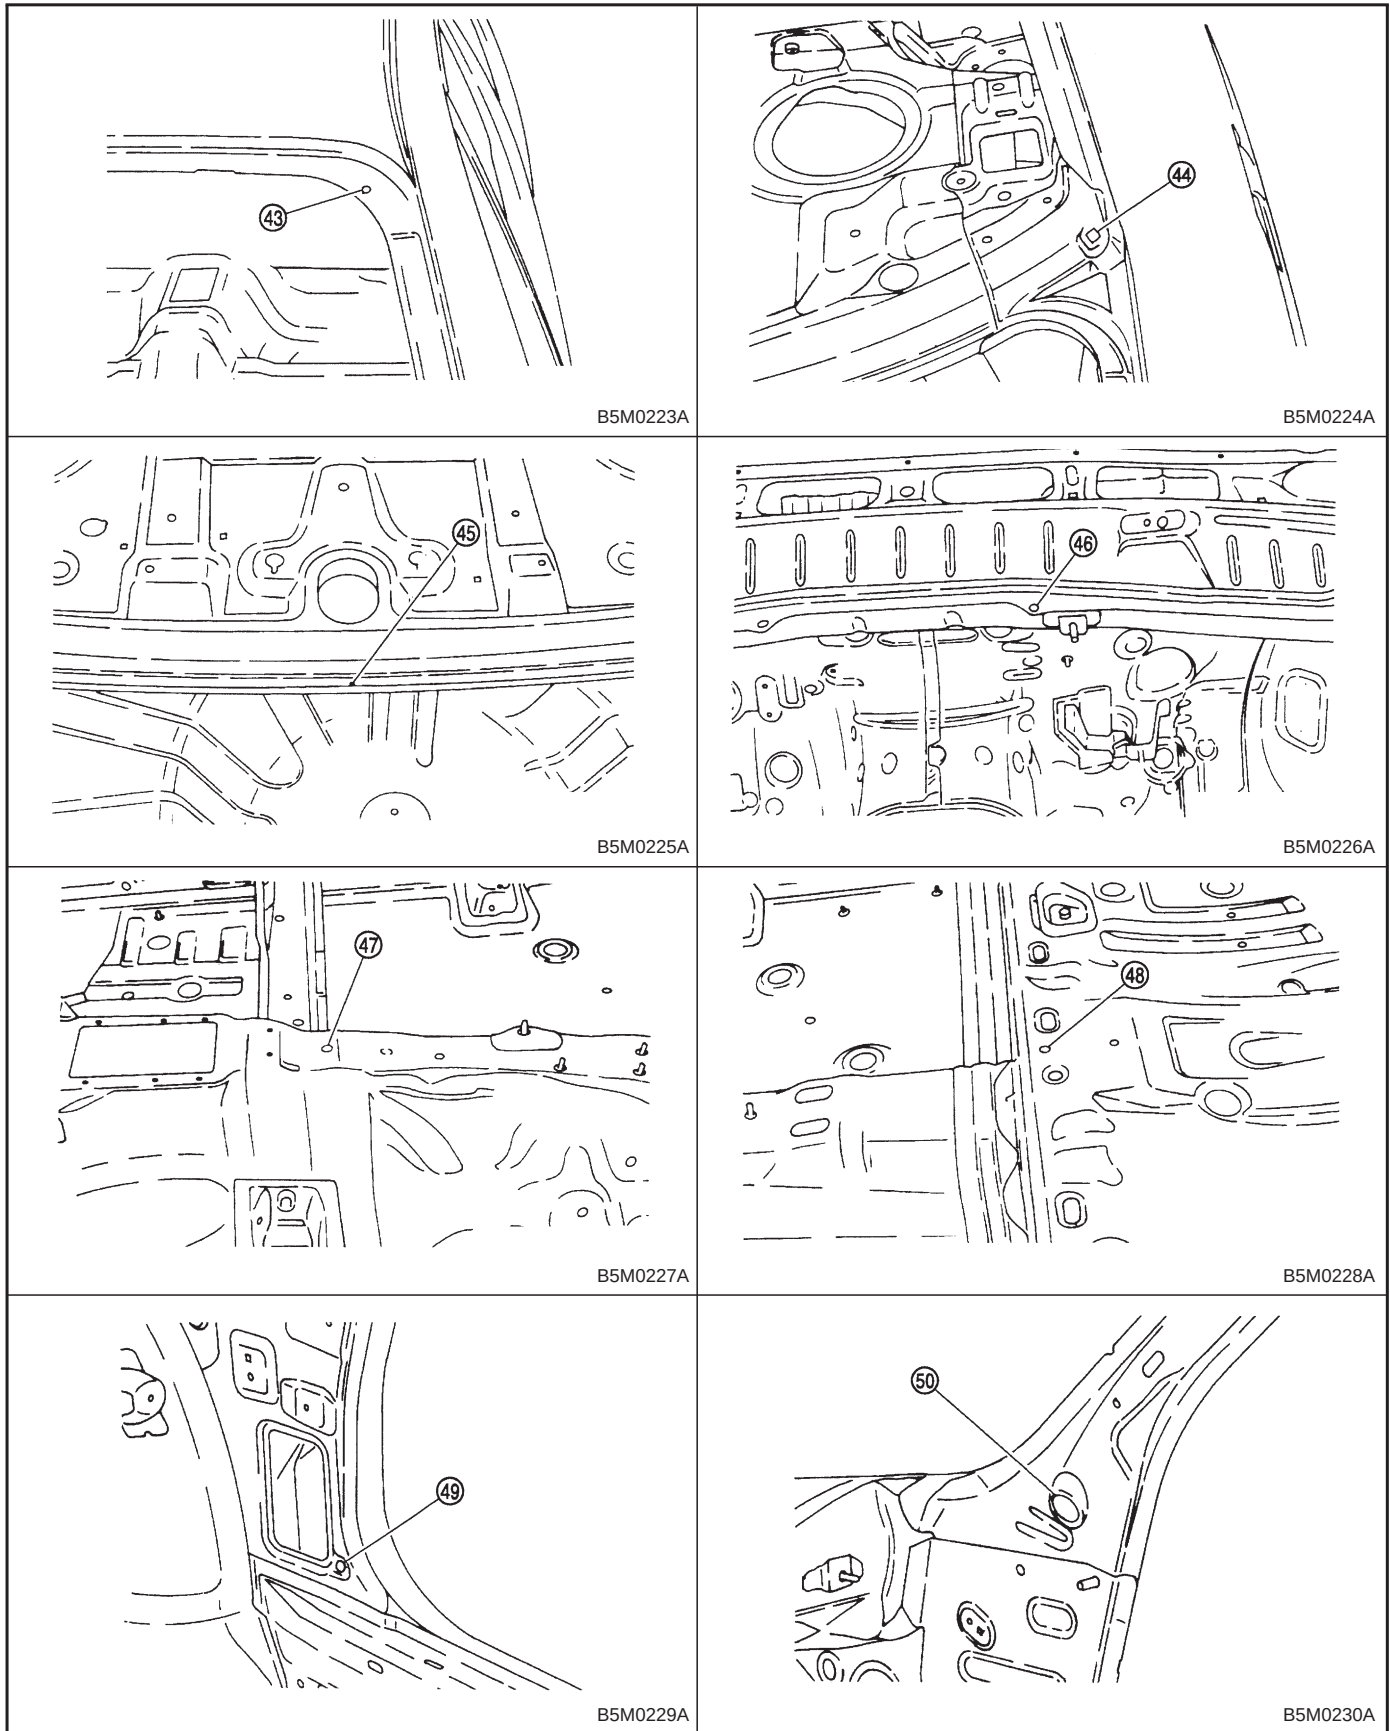

2. Body Datum Points

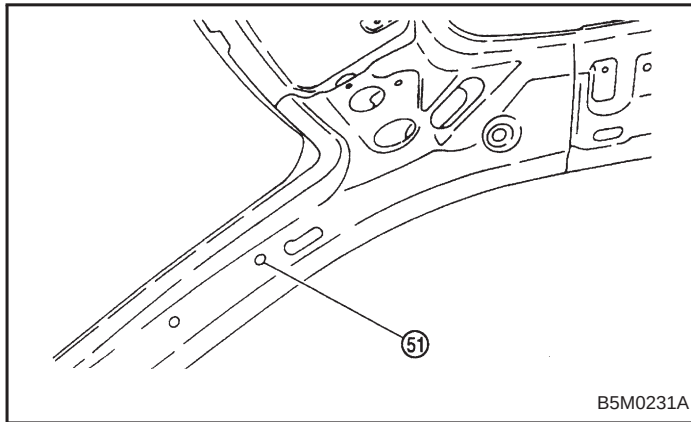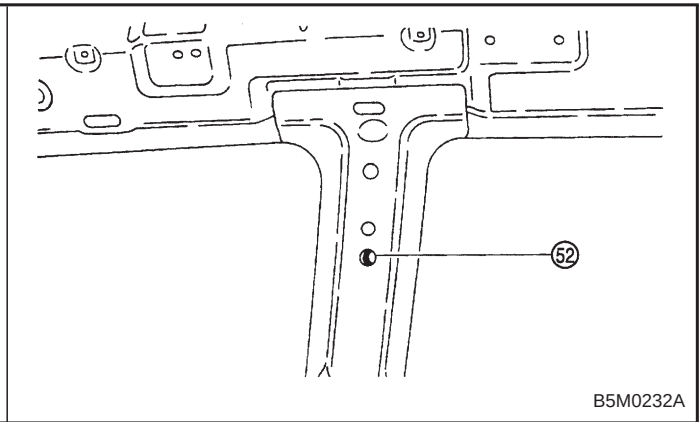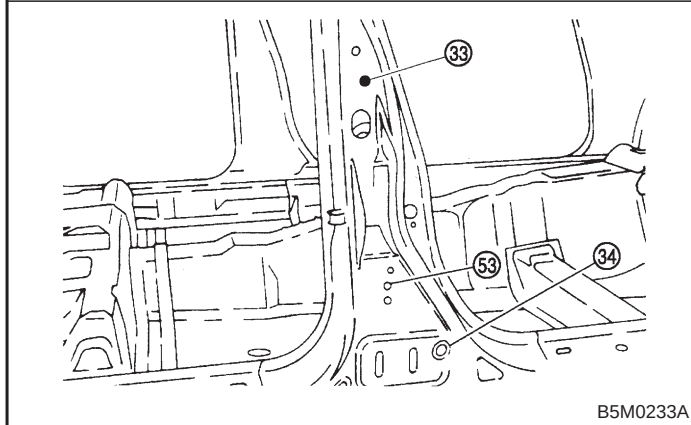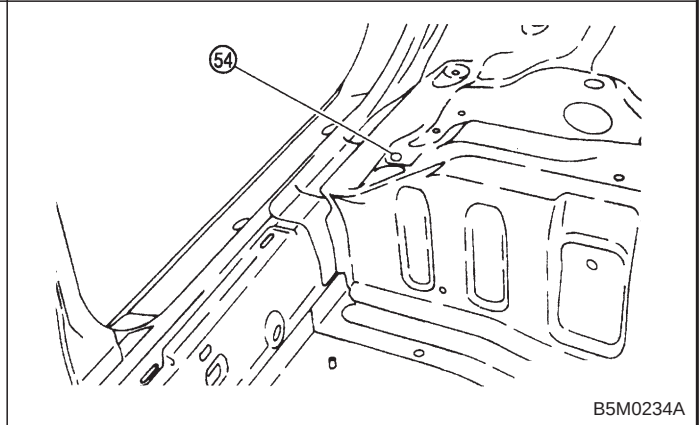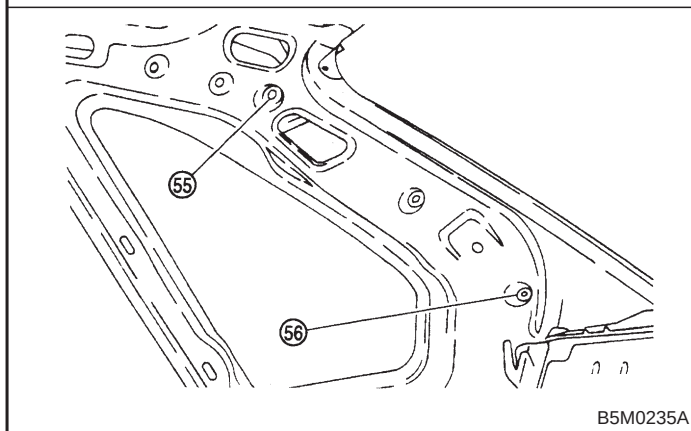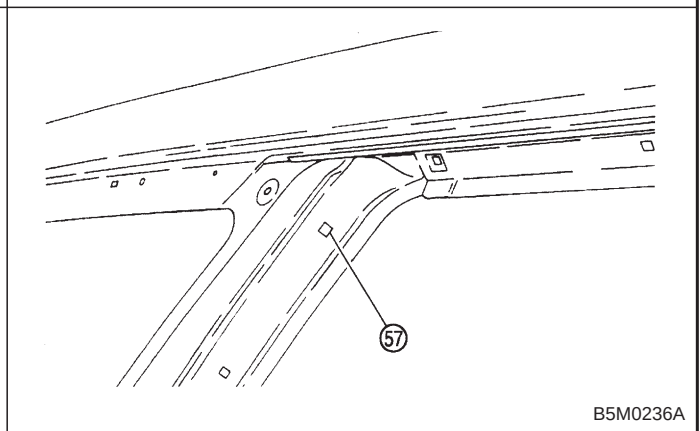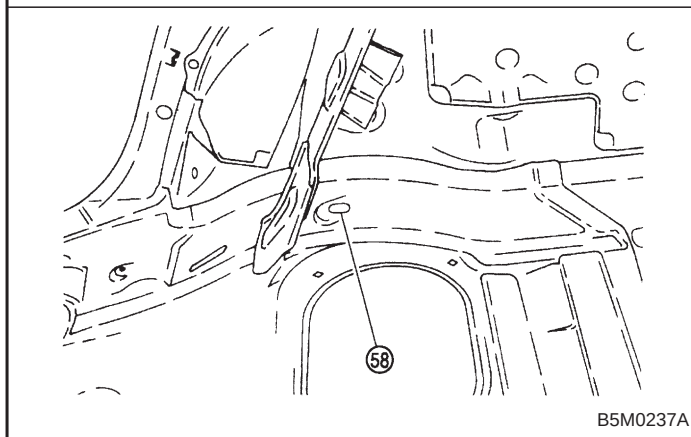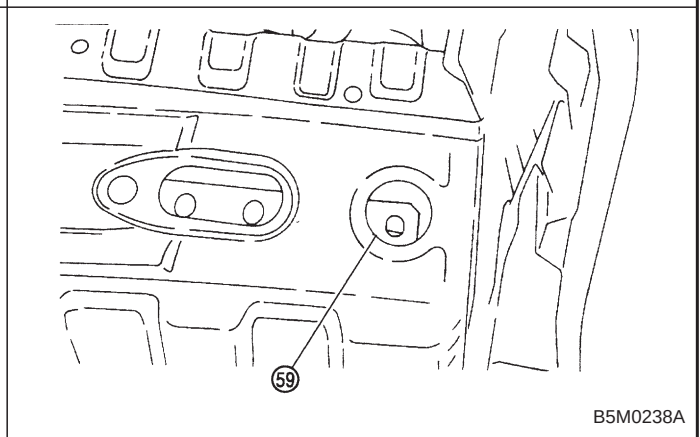

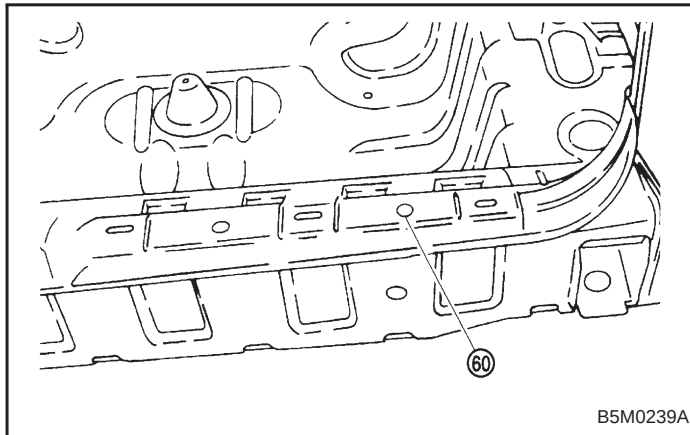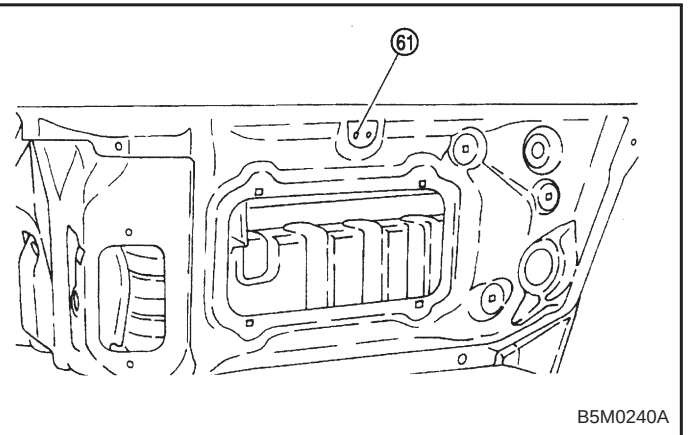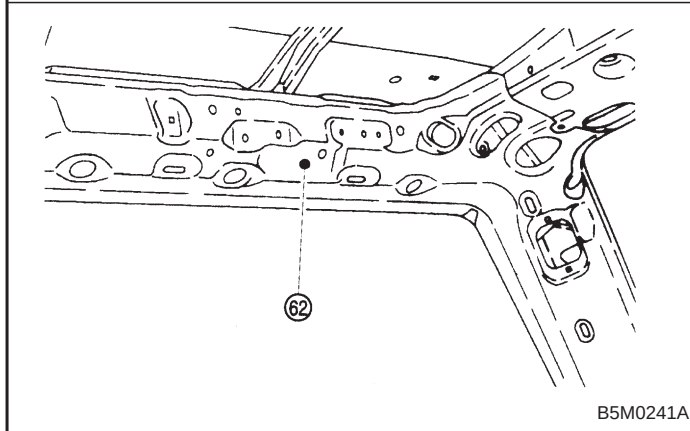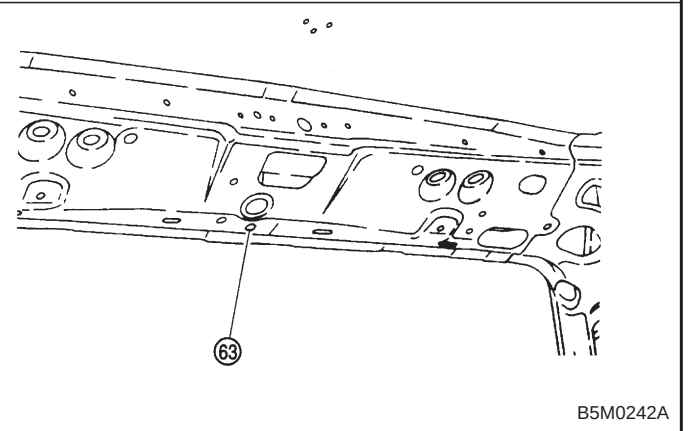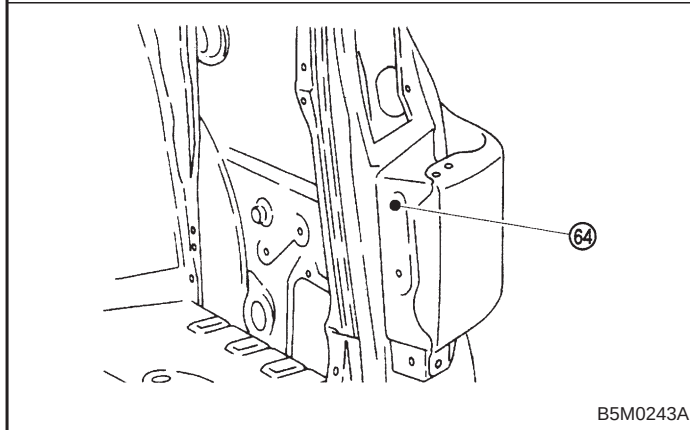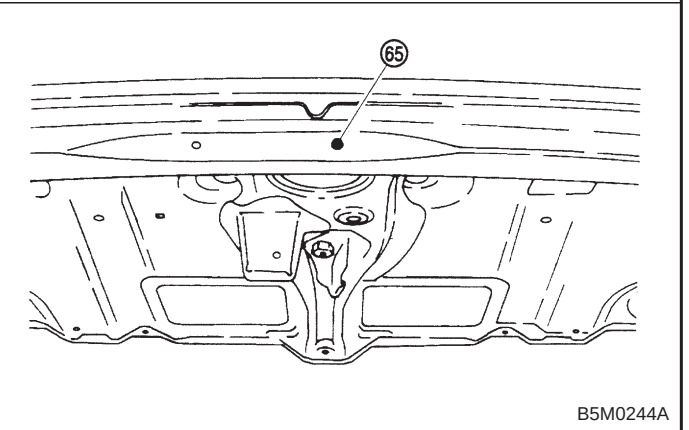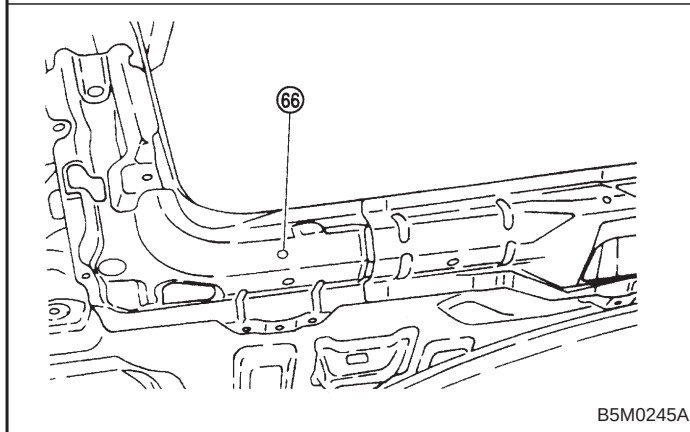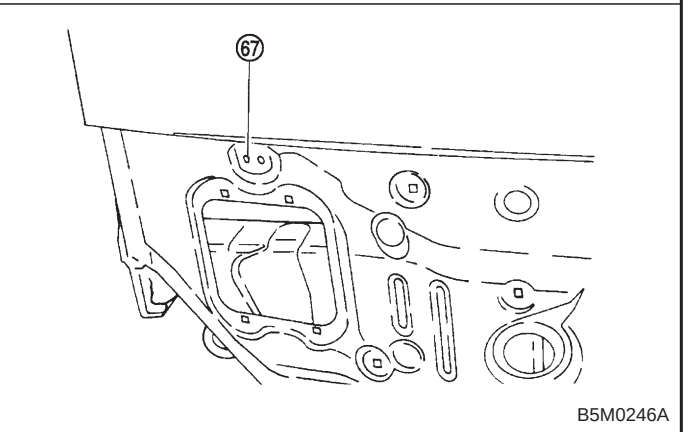

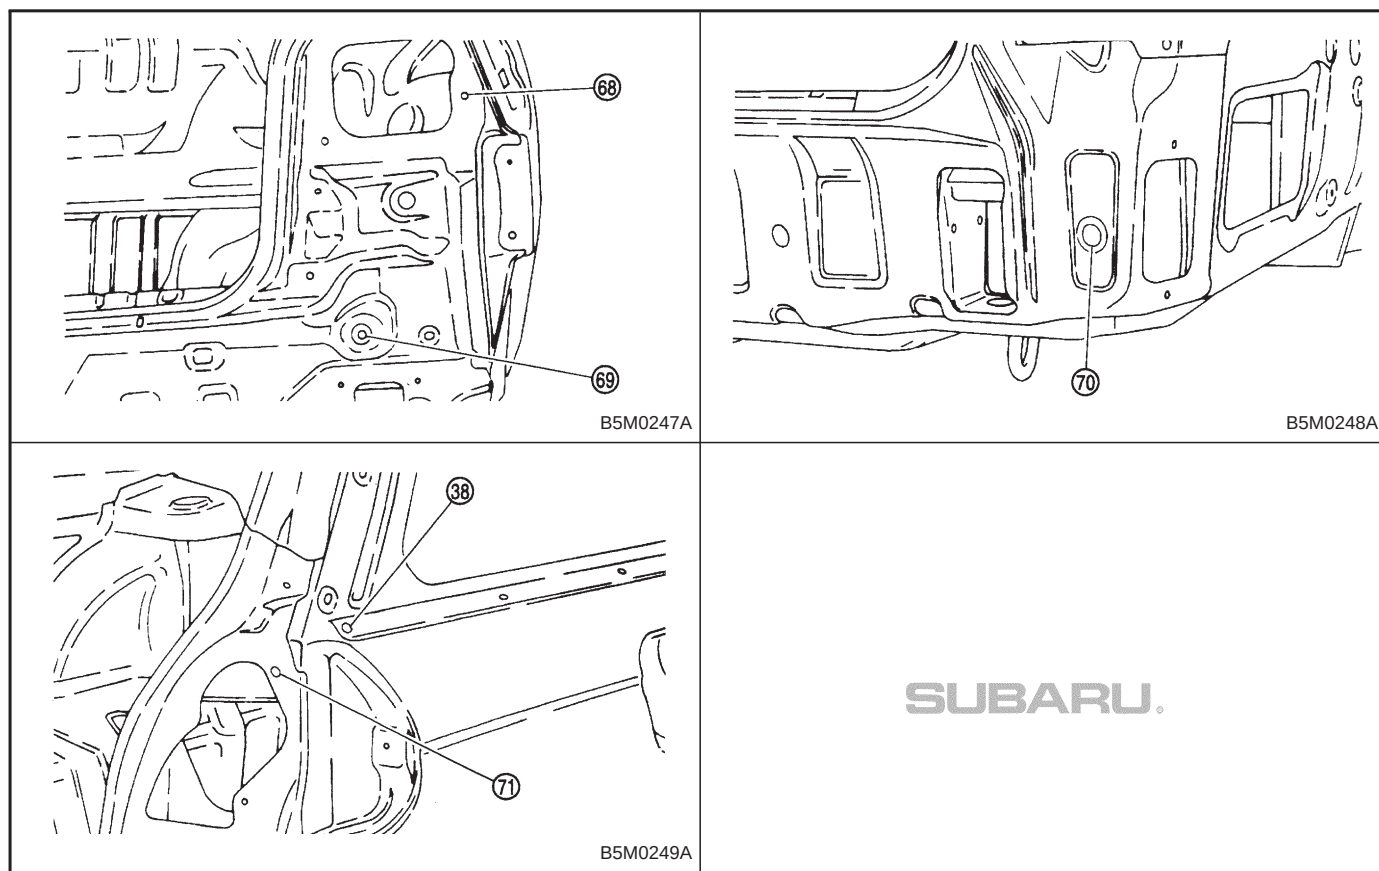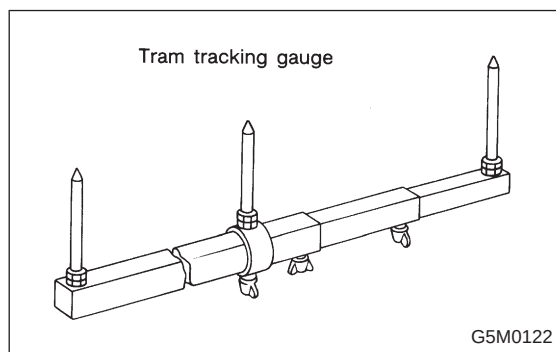

3. Datum Dimensions

Use a tram tracking gauge to measure all dimensions. If a measuring tape is used, be extremely careful because it tends to deflect or twist, which results in a false reading.

NOTE:

- A suffix character "R" or "L" refers to the right or the left.
- All dimensions refer to the distance between the centers of holes measured in a straight line.
- Each dimension indicates a projected dimension between hole centers.